

LQ3500 / LQ3500 di

24 pin Dot Matrix Printer / with Dual Interface



User Instructions

AMSTRAD

LQ3500

NOTICE

PLEASE NOTE THAT WHERE A PRINTER
CABLE IS SUPPLIED IT IS FOR
PARALLEL/CENTRONICS
CONNECTION ONLY. THE SERIAL
INTERFACE REQUIRES A NUL MODEM
CABLE.

LQ350041

NOTICE

PLEASE NOTE THAT WHERE A PRINTER
CABLE IS SUPPLIED IT IS FOR
PARALLEL/ELECTRONICS
CONNECTION ONLY. THE SERIAL
INTERFACE REQUIRES A NULL MODEM
CABLE.

Introduction

AMSTRAD LQ3500

Epson and IBM Compatible Letter Quality Printer

The LQ3500 is a high-performance, 24-pin, LQ (Letter Quality) printer.

It combines the versatility of an industry standard software instruction set with AMSTRAD's expertise in quality engineering.

Single cut sheet or continuous paper may be used, and the design allows the easy insertion and alignment of both tractor and friction feed paper. Printing speeds of up to 160 characters per second will make rapid work of even the most lengthy drafts.

The extremely wide choice of sizes and typefaces coupled with a complete ASCII, international and graphics character set should provide a solution to any printing problem. In addition, the implementation of dot addressable graphics and standard Epson compatible command codes will allow the LQ3500 to operate directly with most software, including word processors, spreadsheets and graphics programs.

The LQ3500 will operate directly with the AMSTRAD PC or other IBM PC-compatibles, as well as the AMSTRAD CPC range of computers, the AMSTRAD PCW9512 word processor and the Sinclair ZX Spectrum +3. It will also operate with any other computer which incorporates a standard parallel printer interface (such as the Acorn range of BBC microcomputers) or an RS232C serial interface.

In addition, the printer may be used (via an AMSTRAD CPS8256 interface) with the PCW8256 and PCW8512 word processors, or (via some other suitable interface) with computers that normally use serial printer output (such as the Commodore range of computers, or the older models in the Sinclair Spectrum series, eg. the Spectrum 48 or 128).



© Copyright 1987 - AMSTRAD PLC.

Neither the whole nor any part of the information contained herein, nor the product described in this manual, may be adapted or reproduced in any material form except with the prior written approval of AMSTRAD PLC. ('AMSTRAD').

The product described in this manual, and products for use with it are subject to continuous development and improvement. All information of a technical nature and particulars of the product and its use (including the information and particulars in this manual) are given by AMSTRAD in good faith.

All maintenance and service on the product must be carried out by AMSTRAD authorised dealers. AMSTRAD cannot accept any liability whatsoever for any loss or damage caused by service or maintenance by unauthorised personnel. This guide is intended only to assist the reader in the use of the product, and therefore, AMSTRAD shall not be liable for any loss or damage whatsoever arising from the use of any information or particulars in, or any error or omission in, this guide or any incorrect use of the product.

We ask that all users take care to submit their user registration/guarantee cards.

All correspondence relating to the product or to this manual should be addressed to:

**AMSTRAD PLC.
Brentwood House
169 Kings Road
BRENTWOOD
Essex CM14 4EF**

IBM, IBM PC, IBM BASIC, and PC-DOS are trademarks of International Business Machines Inc.

MS-DOS and Microsoft BASIC are trademarks of Microsoft Corporation.

DOS Plus, GEM, and CP/M are trademarks of Digital Research Inc.

Locomotive BASIC 2 and Mallard BASIC are the trademarks of Locomotive Software Ltd.

Acknowledgements to Acorn, BBC, CBM, Centronics, and Epson

First Published 1987

2nd edition 1988

Written by Vik Olliver and Ivor Spital

Typeset by Kamset of Brentwood

Published by AMSTRAD

AMSTRAD is a registered trademark of AMSTRAD PLC. Unauthorised use of the trademark or word AMSTRAD is strictly forbidden.

IMPORTANT

You must read this....

1. Always connect the mains lead of the printer to a 3-pin plug following the instructions in chapter 1.
2. Do not attempt to connect the printer to any mains supply other than 220-240V AC 50Hz.
3. There are no user serviceable parts inside the printer - **DO NOT ATTEMPT TO GAIN ACCESS INSIDE THE CASING**. Refer all servicing to qualified service personnel.
4. Do not operate the printer with its ribbon removed.
5. Do not operate the printer with no paper loaded.
6. Do not switch on or operate the printer with the cardboard print head stabiliser in position.
7. Do not bring drinks or any other liquids near the printer. If you *do* accidentally spill liquid on the printer, immediately remove the mains plug from the supply socket and consult your dealer.
8. Do not block or cover the ventilation slots in the cabinet.
9. Do not use or store the printer in excessively hot, cold, damp, or dusty areas.

IMPORTANT

You must read this....

1. Always connect the mains lead of the printer to a 3-pin plug following the instructions in chapter 1.
2. Do not attempt to connect the printer to any mains supply other than 230-240V AC 50Hz.
3. There are no user serviceable parts inside the printer - DO NOT ATTEMPT TO GAIN ACCESS INSIDE THE CABINET. Refer all servicing to qualified service personnel.
4. Do not operate the printer with its ribbon removed.
5. Do not operate the printer with no paper loaded.
6. Do not switch on or operate the printer with the carboid print head stabiliser in position.
7. Do not bring drinks or any other liquids near the printer. If you do accidentally spill liquid on the printer, immediately remove the mains plug from the supply socket and consult your dealer.
8. Do not block or cover the ventilation slots in the cabinet.
9. Do not use or store the printer in excessively hot, cold, damp, or dusty areas.

Contents

Chapter 1 Open the box....

- How to wire up the mains plug
- Preparing the printer
- Fitting the ink ribbon
- Connecting the printer to your computer
- Loading the paper
- How the controls work
- First steps in printing

Chapter 2 Simple printing exercises....

- Printing and listing in BASIC
- Notation used in this manual
- Printing DOS files
- Wildcards
- Listing the disk directory to the printer
- Echoing screen output to the printer
- Printing a screen dump
- Printing GEM files
- Printing DOS Plus and CP/M files
- The print buffer
- Default character set
- The DIP switches
- How to print international characters
- How to change to an alternative typeface
- Control codes

Chapter 3 Selecting print styles....

- Choice of styles
- Cancelling your choice
- Combined styles
- Illegal combinations

Chapter 4

Print formatting control....

- Print head movement
- Form feed
- Margin setting
- Page length setting
- Perforation skipping
- Tabulation
- Text justification
- Paper feed rate adjustment
- Inter-character spacing

Chapter 5

Graphics printing....

- Introduction
- Single, double, triple, and quadruple density graphics
- Bit image graphics modes
- Graphics character alignment

Chapter 6

Extra functions....

- Printer enable/disable
- Repeating print
- Eighth bit setting
- Reset, paper out, bell, and delete
- Print head control
- Character table selection
- International character sets
- Print mode selection
- User defined characters
- Hexadecimal dump

Chapter 7

For your reference....

Technical Specification
Printer socket
Interfaces
DIP switch functions
Signal timing
If your printer stops printing

Appendix 1

Table of control codes

Appendix 2

Character tables

Appendix 3

Index

Chapter 7
For your reference....

Technical Specification
Printer socket
Interlaces
DIP switch functions
Signal timing
If your printer stops printing

Appendix 1
Table of control codes

Appendix 2
Character tables

Appendix 3
Index

Chapter 1

Open the box....

Subjects covered in this chapter:

- How to wire up the mains plug
- Preparing the printer
- Fitting the ink ribbon
- Connecting the printer to your computer
- Loading the paper
- How the controls work
- First steps in printing

Unpacking your printer

In addition to the LQ3500 printer and this manual, you will also find the following items within the packing pieces:

- A printer ribbon (inside the left foam end-piece).
- A printer cable (not supplied in some countries).
- A tractor feed assembly (inside the right foam end-piece) together with some small plastic brackets.
- A metal rod (at the back of the printer).

Make sure that you do not accidentally discard any of these items during unpacking.

Fitting a mains plug to your printer

The LQ3500 operates from a 220-240 Volt AC 50Hz mains supply. Fit a proper mains plug to the mains lead of the LQ3500. If a 13 Amp (BS1363) plug is used, a 3 Amp fuse must be fitted. The 13 Amp fuse supplied in a new plug must NOT be used. If any other type of plug is used, a 5 Amp fuse must be fitted either in the plug or adaptor or at the distribution board.

WARNING: THIS APPARATUS MUST BE EARTHED

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	: Earth
Blue	: Neutral
Brown	: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured **GREEN-AND-YELLOW** must be connected to the terminal in the plug which is marked by the letter **E** or by the safety earth symbol $\perp$ or coloured green or green-and-yellow.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red.

Disconnect the mains plug from the supply socket when not in use.

Do not attempt to remove any screws, nor open the casing of the LQ3500. Always obey the warning on the rating label located on the underside of the unit:


WARNING:
LIVE PARTS INSIDE - DO NOT REMOVE ANY SCREWS

Preparing your printer


Now that you've fitted the mains plug, you'll no doubt be anxious to plug in, switch on, and start printing.... **DON'T!** There are a number of important preparations yet to be made, and it is vital that you carry out the following instructions first, or you'll damage the printer before you get started:

Removing the cardboard print head stabiliser

Raise the plastic cover at the front of the printer by simply lifting the tab on the left hand edge, closest to the roller. To replace the cover, you just lower it again.

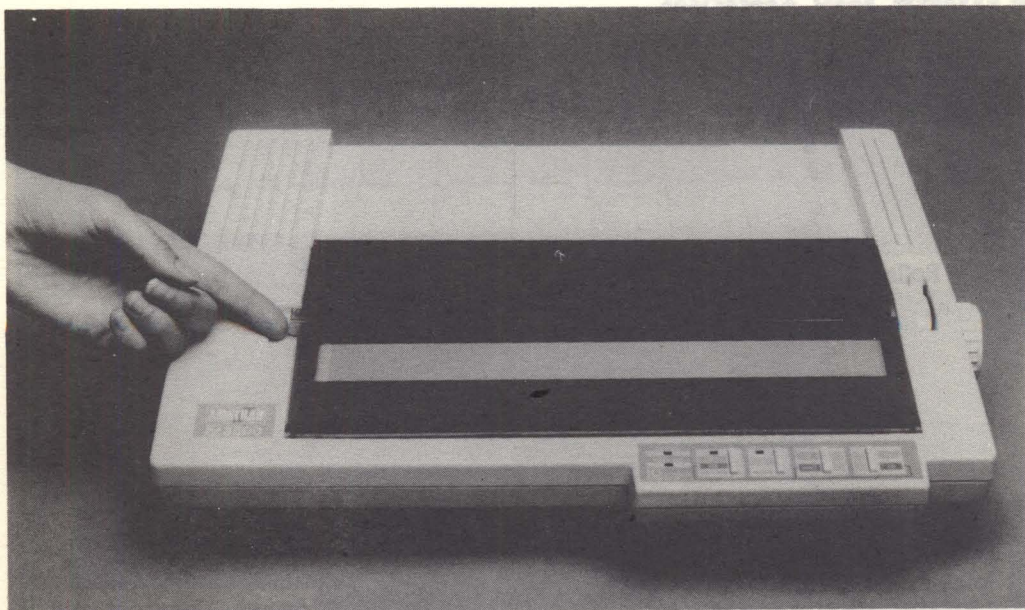


Now remove the cardboard print head stabiliser by lifting it out of the printer.

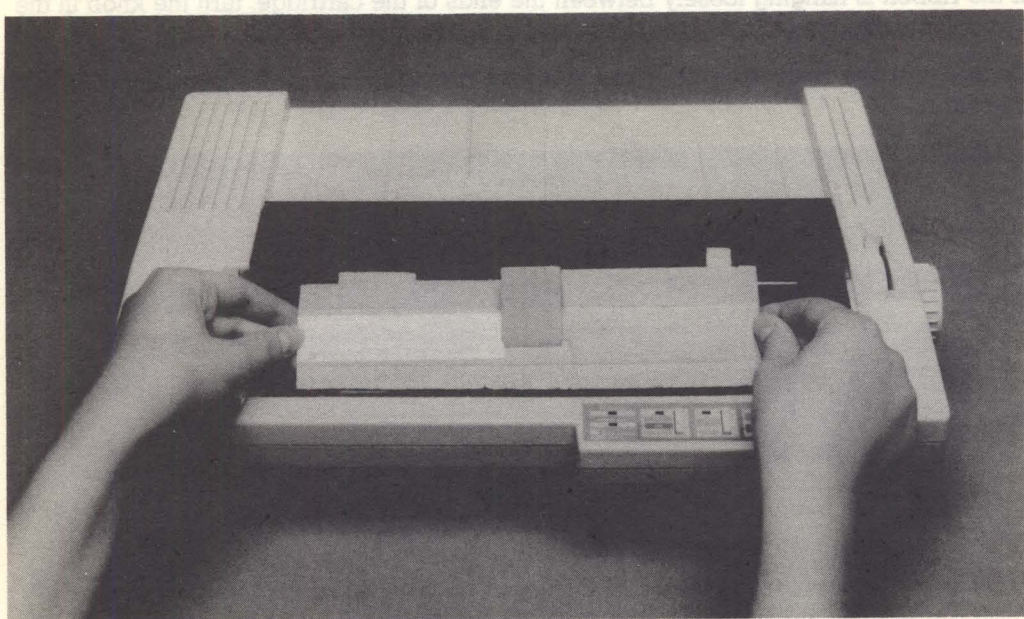

If the cover comes off in your hands, lay it flat where it should go, and press gently on the two corners closest to you. You should feel it click into place.


Fitting the ribbon

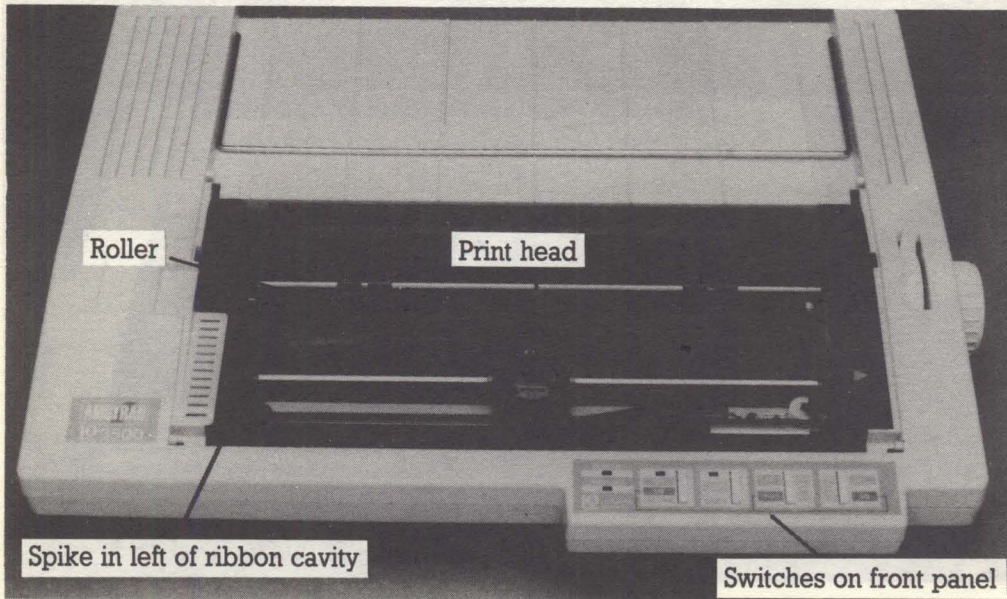

Carefully unpack the printer ribbon cassette, taking care not to touch the ribbon with anything you'd like to keep clean.

If the ribbon is hanging loosely between the ends of the cartridge, turn the knob in the top of the cartridge (A) anti-clockwise until the ribbon is a little more taut.

Do not turn the knob clockwise, as this may cause the ribbon to unwind inside the cartridge.

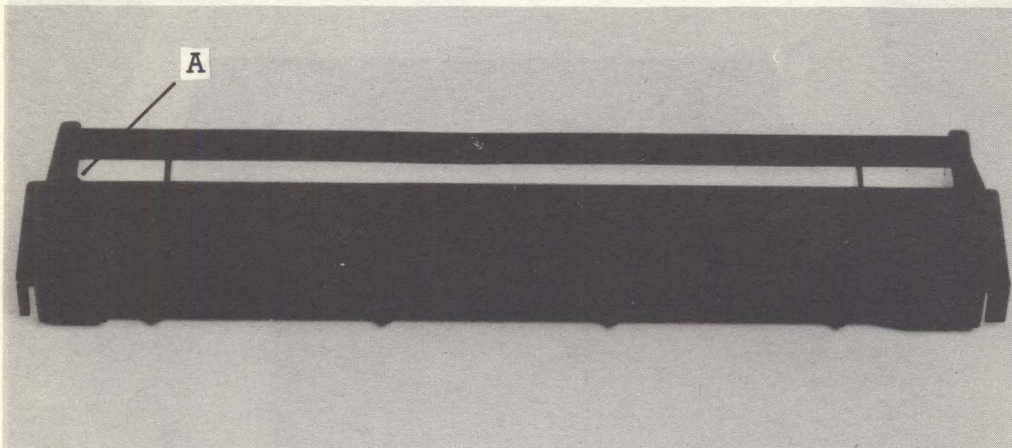

On top of the cartridge is a small schematic diagram, showing the path of the ribbon. Position the ribbon just like it shows, ensuring that it passes between the print head and the small shield in front of it. To settle the cartridge down, press down gently and rotate knob (A) a few times in an anti-clockwise direction.

You can now put the front cover down again.

Ribbon removal and replacement


Should you wish to remove or replace the ribbon at any time, simply reverse the fitting process just described.

Connecting the printer to a PC (Parallel Interface)

To connect the LQ3500 to a PC (such as the AMSTRAD PC) you will require a suitable lead (the AMSTRAD PL-2 or any other equivalent IBM PC to Centronics printer lead).

Position your LQ3500 on a flat even surface, close to your PC. Make sure that both the printer and your PC system are switched off.

Connect the large Centronics plug (at the end of the printer lead) into the rear socket on the printer. If the Centronics plug has a cut-out in each side, you may fasten the printer's locking-clips into the cut-outs.

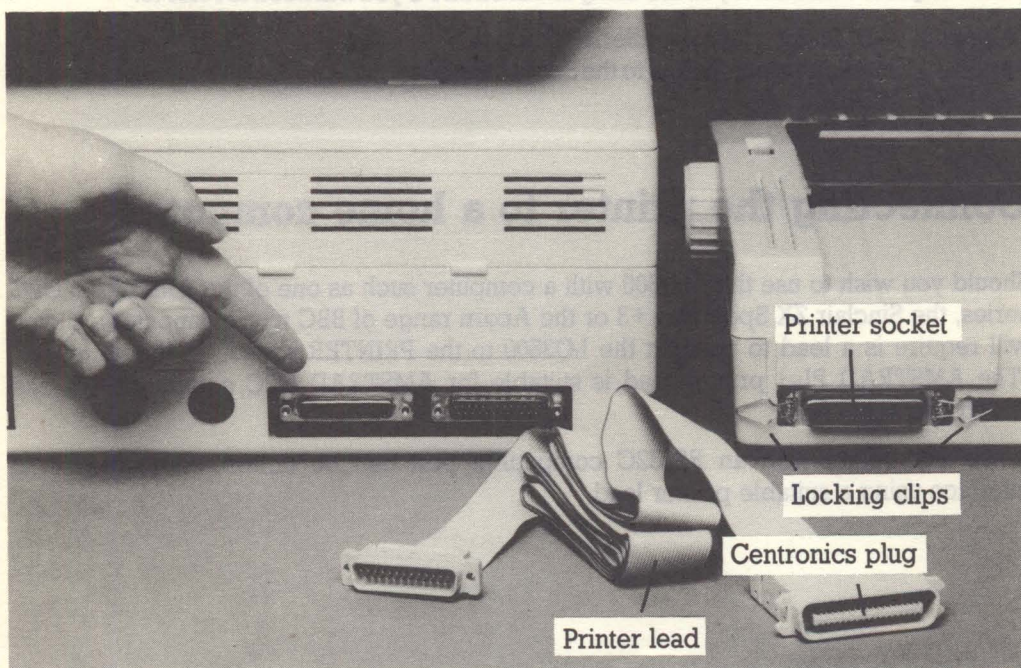

Connect the other (smaller) end of the printer lead into your PC. If you are connecting the LQ3500 to an AMSTRAD PC, use the socket marked PARALLEL PRINTER at the rear of the PC system unit.

Connecting the printer to a PC (RS232C/Serial Interface)

To connect the LQ3500 to the serial port of a PC you will require a Null-modem RS232 cable with a 25-pin D-type male connector for the printer on one end and a connector on the other end for the serial port of your computer, consult your dealer if you do not already have a suitable lead.

WHERE A LEAD IS PROVIDED WITH YOUR PRINTER IT IS FOR CENTRONICS/PARALLEL USE ONLY DO NOT USE IT FOR SERIAL CONNECTION.

Before plugging in the lead make sure the power switches on your computer and printer are switched OFF.

Once connected set the Serial Port DIP switches on the back of the printer (see page 82c for settings, DS3-7 and DS3-8 would normally be set for RDY/BSY protocol) then turn your printer and computer on. Set your computer so that the printer output is sent to the serial port and the baud rate, parity, and data length agree with the DIP switch settings.

If you have not used a serial printer with your computer before you will need to refer to your computer manuals. If you are using an Amstrad PC you will need to refer to:

Appendix V1.2 "Making use of the Serial Interface"


Part III 7.1 "Sending printer output to the Serial Interface"

Part III 7.3 "MODE"

Connecting the printer to a home computer

Should you wish to use the LQ3500 with a computer such as one of the AMSTRAD CPC series, the Sinclair ZX Spectrum +3 or the Acorn range of BBC microcomputers, all you will require is a lead to connect the LQ3500 to the PRINTER socket on the computer. (The AMSTRAD PL-1 printer lead is suitable for AMSTRAD CPC computers and the Spectrum +3.)

Home computers with an RS232C compatible port can be connected to the serial interface using a suitable printer lead.

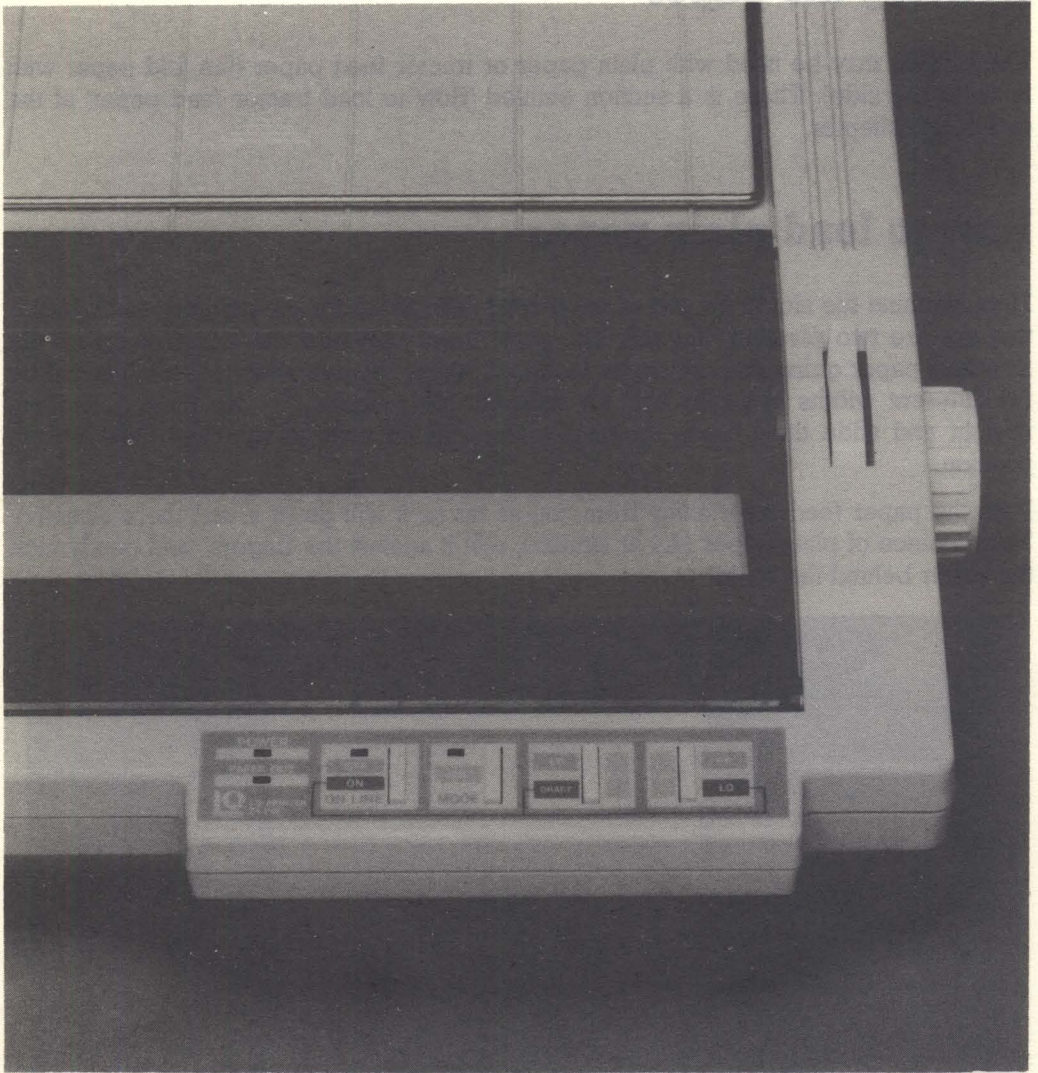

Switching on

Switch on your computer system, then set the LQ3500 mains ON/OFF switch (at the rear left-hand side of the printer) to *on*. The print head will move about for a few seconds, and you will then hear a high-pitched bleeping sound. This sound is the paper out alarm, but do not worry about it for the moment. After the alarm has stopped, you will note that the POWER lamp and the PAPER OUT lamp are both on.

All that has to be done now is to load the paper, then you can start printing. First, decide which type of paper you are going to load into it.


Loading the paper

The LQ3500 may be used with plain paper or tractor feed paper (fan fold paper with holes at the side). There is a section entitled 'How to load tractor feed paper' at the end of this chapter.

How to load plain paper

First, examine the slot in the top of the printer. This is where the paper goes in. Inside this slot are two pivoting 'fingers'. You point these upwards and use to prop up the sheets of paper going into the paper feed slot. These 'fingers' slide to the left and right for different widths of paper and for different left margins. To use them, pull them upright and slide their bases together about half an inch or so. They then lock in position.

Push the paper feed lever away from you as far as it will go (if it isn't there already). Take a piece of plain paper (A4 or similar), rest it against the 'fingers', and gently tuck the paper behind the roller.

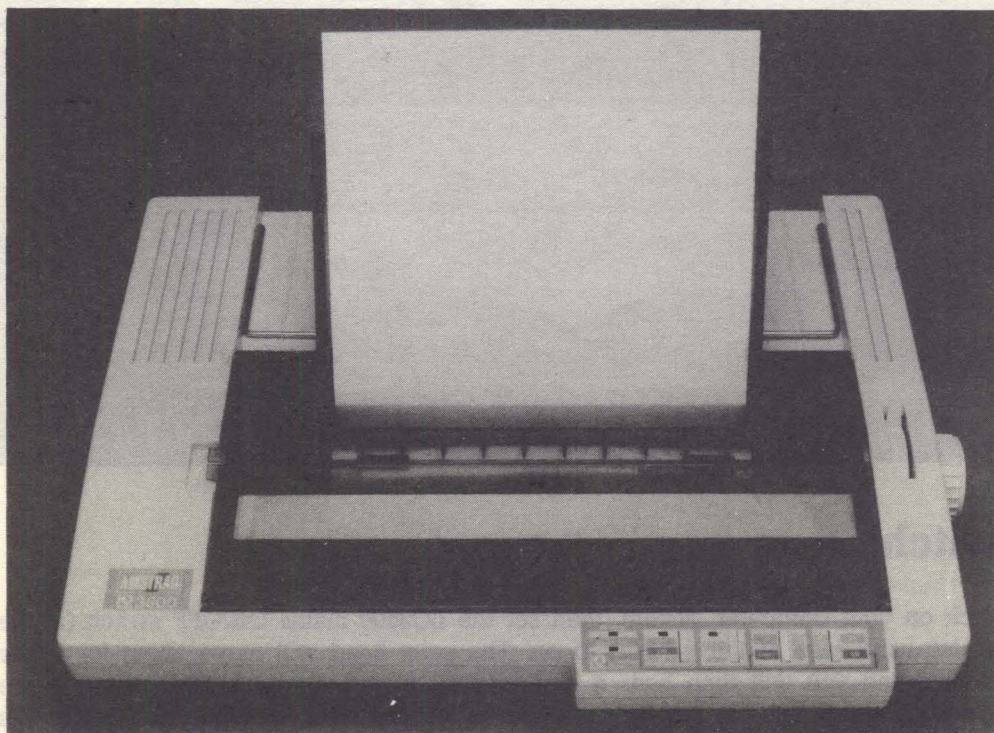


Smoothly pull the lever towards you all the way, and hold it there. The paper will now be automatically fed through, first slowly, and then rapidly. After this, the PAPER OUT light will go off.

To finish off, push the lever all the way forward, and straighten things up by hand if necessary.

(Note that the position printing takes place on the paper, is directly under the print head.)

Paper thickness adjustment

Once the paper is loaded, you may adjust the red paper thickness lever to a suitable setting - backwards for thicker paper (or two sheets); forwards for thinner paper.

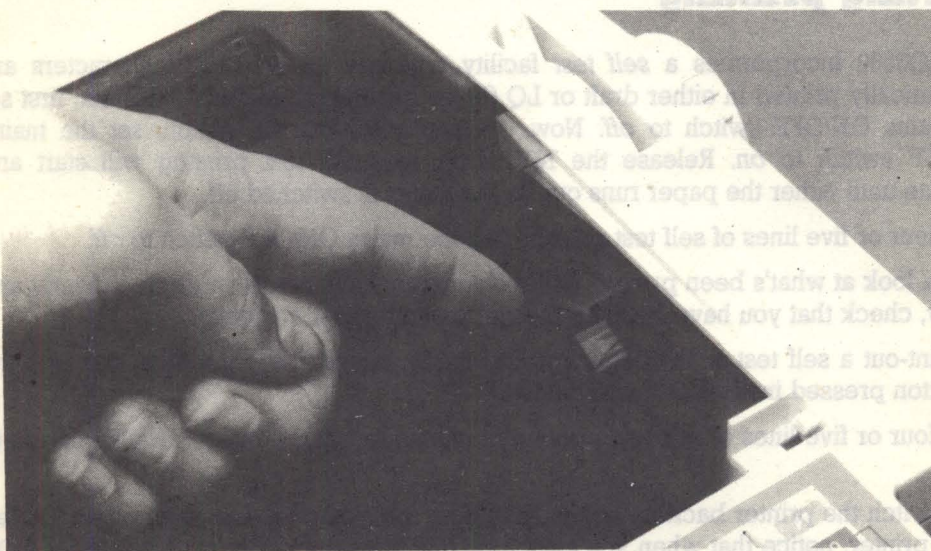

Note that moving the paper thickness lever forwards will darken the printing; moving it backwards will make the printing lighter.

On the black plastic shroud next to the paper thickness lever are some markings. Normally, the lever would be on or near the star * mark. If 2-ply or thick paper is being used, the lever would be moved down two or three notches. The last notch is for exceedingly thick paper (such as the heavier types of legal parchment). Marks above the star are for factory testing only, and using them will tend to jam or damage your printer.

If you are already experienced in using a printer with a computer and know how each of the controls work, then you may skip to the next chapter (or to the section entitled 'How to load tractor feed paper' at the end of this chapter).

Moving the paper

Once the paper is loaded, you may advance it through the printer by using the LF (Line Feed) button. Pressing the LF button once advances the paper by one line; holding the button down allows you to advance the paper continuously until you release the button. The FF (Form Feed) button will allow you to advance the paper by one page at a time. The use of this button will be explained shortly. The LF and FF buttons will move the paper only when the ON LINE lamp is off.

You may at any time advance the paper by using the manual paper feed knob instead of the LF and FF buttons, but the printer will then still print as if the paper had not been moved. For example, when it feeds a new sheet, it may not line up at the top correctly.

Starting printing

The LQ3500 incorporates a *self test* facility whereby all the ASCII characters are automatically printed in either draft or LQ (letter quality) mode. To try this out, first set the mains ON/OFF switch to *off*. Now, holding down the LF button, set the mains ON/OFF switch to *on*. Release the LF button, and self test printing will start and continue until either the paper runs out, or the mains is switched off.


After four or five lines of self test printing, set the mains ON/OFF switch to *off*.

Have a look at what's been printed. If the characters have not been printed clearly and evenly, check that you have installed the ribbon and paper correctly.

To print-out a self test in LQ (letter quality) mode, repeat the procedure, but with the FF button pressed instead of the LF button.

After four or five lines of self test printing in LQ mode, set the mains ON/OFF switch to *off*.

Now switch the printer back *on* again. Assuming that you still have some paper loaded in the printer, notice that when you switch on this time, the paper out alarm does NOT come on, and the ON LINE lamp is lit.

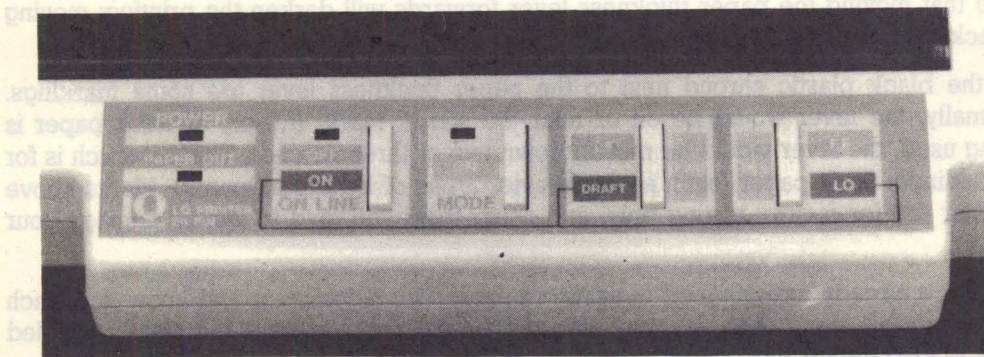

What does 'on line' mean?

'On line' means that the printer is ready to print (as soon as it receives a command from the computer). Note that when the printer is on line, you won't be able to move the paper using the LF or FF buttons. What you must then do is press the ON LINE button once (so that the ON LINE lamp goes off). This is known as setting the printer 'off line', and you will then be able to advance the paper using the LF and FF buttons. So briefly, the rule is: on line to print; off line to stop printing ready to move the paper.

The FF button

The FF button may be used to advance the paper through the printer by one whole page.

To demonstrate, set the printer off line, then press the FF button. Watch what happens to the paper.

Form feed is very useful if, for example, you've just printed a letter to somebody and you wish to run it out from the printer.

If you are using tractor feed paper (explained at the end of this chapter) you may use the FF button to advance the paper by one page's length.

The MODE button

This changes the function of the FF and LF buttons slightly. When the MODE button is repeatedly pressed, the MODE light goes on and off. When the MODE light is off, the LF and FF buttons perform as just described. When the MODE light is on, however, the LF button causes the paper to move very slowly (1/180 inch at a time) through the printer, and the FF feeds the paper *backwards* through the printer, one line at a time.

Two points to note about the alternative modes of operation: firstly, don't feed tractor paper backwards; secondly, remember that feeding paper with the alternative mode set does not take into account where the printer 'thinks' the top (or bottom) of the page is.

Print your first word

Load a piece of paper into the printer.

Press the ON LINE button, and make sure that the ON LINE lamp is lit.

From now on, you will be shown various example printer commands (in BASIC) to type into your computer. These commands will be compatible with the BASIC provided with most PCs, ie. IBM BASIC, Microsoft BASIC, Locomotive BASIC 2 (provided with the AMSTRAD PC), Mallard BASIC, BASIC-A, etc.

So the first thing to do is to start up BASIC on your PC. Having done so, send a word (for example 'hello') to the printer by typing the following instruction into the computer:

```
LPRINT "hello"
```

The word 'hello' (or whatever you typed inside the quotation marks) should have immediately been printed-out by the LQ3500. If it hasn't, then check that you pressed the  ([Return] or [Enter]) key on your computer after typing in the instruction. If nothing still was printed, then check that the lead between the printer and the computer is correctly fitted at both ends, that the paper is correctly loaded, and that the printer is on line (the ON LINE light should be on).

Well, you have now set up the LQ3500 and printed your first word. The next chapter goes on to describe some of the simpler printing functions, and will introduce you to some of the alternative styles of printing that the LQ3500 is capable of.

Finally in this chapter....


How to load tractor feed paper


In the packaging was a long assembly with two plastic coggled wheels on it. This is called the tractor mechanism. The two outer plastic wheels are called tractors, and they may be moved left or right to accommodate the size of paper you are using. The inner plastic wheel supports the middle of the paper and may be slid to any suitable position, usually the centre.

Tractor feed paper is useful if you want to print program listings or long continuous texts. Before loading the paper into the printer, you will need to assemble the paper separator from the parts supplied. The bits you need are:

- The metal bracket
- The metal rod
- The two plastic brackets

To construct the separator, fit a plastic bracket onto each end of the metal rod, then slide the open ends of the fingers into the arms of the metal bracket

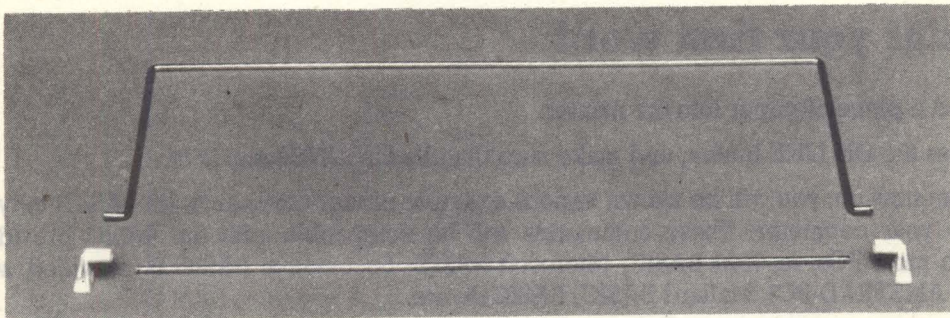

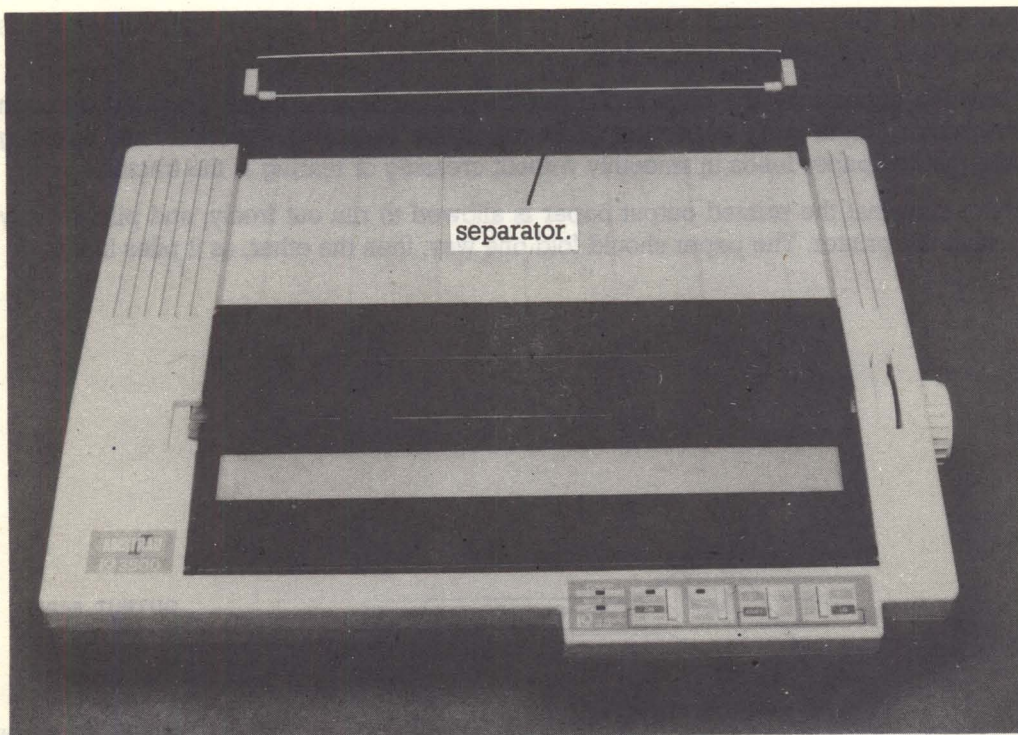

The paper separator prevents paper that has just been printed onto from going back into the printer again. (When this happens, your printout is messed up, and the roller gets totally wrapped in paper. It is therefore a good idea to fit the separator whenever you use tractor feed paper. Fit it now.)

Now you need to fit the tractor mechanism on top. First, remove the cover with the slot down the middle (usually positioned over the roller). This is removed by raising the cover so that it is pointing straight upwards, then lifting it off.

Next, take the tractor mechanism and slot the small plastic clips (at the front) into the holes near each end of the bail bar. Once they are in, you can hinge it back and apply gentle pressure until it clicks into place. Don't worry if it pushes the bail bar slightly forwards - it's supposed to do that.

Load the paper into the printer (as described earlier for plain paper), then wind it on until enough paper is emerging to reach the tractor mechanism.


The paper passes underneath the separator on the way in, and passes over the top of it on the way out. This stops the paper that has just been printed onto diving back into the printer again.

Flick open the covers on the tractor wheels to expose the paper locating cogs. Now line up the paper holes with the cogs, and if necessary, slide the tractors sideways to accommodate the size of paper being used.

Make sure that the round plastic piece in the middle of the tractor mechanism is placed half way between the tractors.

Place the paper over the cogs and close the tractor covers. Wind the paper through the printer a little more (using the LF button or the manual paper feed knob) making sure that the paper feeds in smoothly without creasing or tearing at the tractors.

Make sure that the printed output paper is allowed to run out freely, and pile directly behind the printer. The paper should fold one way, then the other, as it piles like this:

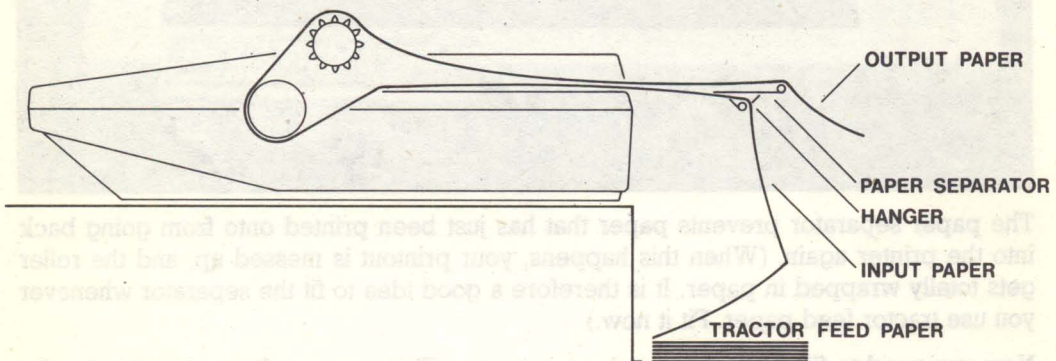

When taking off the tractor mechanism, **ALWAYS** remove it by tilting the rear of the plastic end-pieces towards you. **NEVER** use force on the tractors, tractor covers or metal bars - you might damage them.

Chapter 2

Simple printing exercises....

Subjects covered in this chapter:

- Printing and listing in BASIC
- Notation used in this manual
- Printing DOS files
- Wildcards
- Listing the disk directory to the printer
- Echoing screen output to the printer
- Printing a screen dump
- Printing GEM files
- Printing DOS Plus and CP/M files
- The print buffer
- Default character set
- The DIP switches
- How to print international characters
- How to change to an alternative typeface
- Control codes

Printing in BASIC

Having set up the LQ3500 and printed a word or so, you'll by now have gathered that to send text to the printer, you simply use the BASIC command `LPRINT` followed by the text you wish to print (inside quotes). This not only applies to the printing of constant strings (such as that shown in the previous example), but also to any combination of string variables, numbers, numeric variables, or control codes (more about these things later).

Formatted printing may also be executed using the options: `LPRINT TAB`, `LPRINT SPC`, `LPRINT USING` and `ZONE`.

Consult your BASIC manual about the use of these commands, and find out which are used on your computer.

When using Mallard BASIC; pay special attention to the `WIDTH` `LPRINT` and `OPTION NOT TAB` commands, as these have caught out the most experienced programmers many times.

Listing a program in BASIC

BASIC programs may be listed to the printer. Simply type in:

LLIST

(Don't forget to always press the  ([Return] or [Enter]) key on your computer after typing in an instruction.)

Alternatively, you may list a specific line (or range of lines).

Example commands (together with their meanings):

LLIST 20-50	(list from line 20 to line 50)
LLIST -200	(list from beginning of program to line 200)
LLIST 80-	(list from line 80 to end of program)

Some BASICs treat the printer as an output stream or file. So, to list on, say, an Amstrad CPC machine, you would use:

LIST #8

....or:

LIST 20-50, #8

To list a program to the printer under Locomotive BASIC 2 (supplied with the AMSTRAD PC), use the mouse to pull down the PROGRAM menu, then select the LIST option.

Notation used in this manual

IMPORTANT: Before we go on to showing you some more example commands, you should note that from now on in this manual, an item shown in angled brackets, eg. <item> is NOT to be typed-in literally; the item merely represents the *sort* of information to be entered. Hence, where the manual gives an example command:

PRINT <filename>

....you would typically type in:

PRINT letter.jim

....where 'letter.jim' is the filename.

Furthermore, items shown in square brackets, eg. [*another item*] are optional and need not be entered unless required. Hence, where the manual gives an example command:

```
PRINT [<drive>:]<filename>
```

....you may typically type in:

```
PRINT letter.jim ....or.... PRINT a:letter.jim
```

....where 'letter.jim' is the filename and 'a' is the (optional) drive. The : colon (which is NOT in angled brackets) *must* be typed-in literally if the optional part of the command is used.

NOTE: The next section in this manual deals with printing *non-BASIC* files under the operating systems: MS-DOS, PC-DOS, GEM, DOS Plus and CP/M. If you are only interested in printing from BASIC, then skip to the section ahead entitled 'Back to BASICS'.

Printing DOS files

Under MS-DOS, PC-DOS or DOS Plus, files may be printed-out using the following commands:

```
PRINT [<drive>:][<path>]<filename>
```

The path is a directory name, or several directory names, each ending in a '\'. Directories, in case you have not used them before, are a way of organising your drives into conveniently-sized chunks.

Example command:

```
PRINT a:autoexec.bat
```

....which will print-out the file 'autoexec.bat' (if it is present on the disk currently in Drive A:).

You may then see a prompt on the screen similar to:

```
Name of list device [PRN]:_
```

....whereupon you should press  ([Return] or [Enter]). Further messages about the operation in progress will appear on the screen, and the specified file will be printed-out by the LQ3500. Alternatively, you may use the COPY command to send the file to the printer, ie:

```
COPY [<drive>:][<path>]<filename> PRN:_
```

Example command:

```
COPY a:autoexec.bat PRN:
```

After a file is printed-out, a message similar to:

1 File(s) copied.

....will appear on the screen.

It is *not* a good idea to try to print out files with names ending in any of the following:

- .EXE
- .COM
- .BAS
- .APP
- .LIB
- .REL
- .GEM
- .IMG

These are files with special meaning to the computer, and are not meant to be read by humans (or printers for that matter).

Wildcards

In each of the above types of command, 'wildcards' may be used to specify a range of files to print-out, rather than just one.

There are 2 types of wildcard: ? and *. The ? question mark wildcard may be used to represent 1 character in a filename which has any value. For example, the filename B?D.B?G could specify any number of files, eg: BAD.BAG, BED.BUG, BID.BIG, BUD.BOG, BCD.B3G, B4D.BEG, etc.

The * asterisk wildcard may represent any group of characters up to the end of the filename field. For example, the filename B*.* could specify any number of files, eg: BIG.TOE, BINARY.DTA, BREATHE.IN, B.TRE, BLAST-IT. etc. Notice how in the last example (BLAST-IT.) the * wildcard specified represents no characters at all. This is a perfectly valid use of the wildcard. Finally, the filename *.* means *all files*.

With wildcards in mind, therefore, you may print-out, for example, all 'BAT' files, using either of the commands:

PRINT a:*.bat

....or....

COPY a:*.bat PRN:

Listing the disk directory to the printer

The disk directory may be listed to the printer (under any of DOS systems provided with your PC) by typing the command:

```
DIR >PRN
```

Alternatively, you may switch 'printer-echo' on (described in the next section) and list the directory to the screen.

Echoing screen output to the printer

The [Ctrl] P function may be used to echo screen output to the printer, ie. whatever is written to the screen is also printed-out by the LQ3500. Some programs (such as word-processors) may access the screen directly. If you want hard copy of something produced in this manner it is possible (see the section on screen dumps).

To switch printer-echo on, hold down the [Ctrl] key on your computer and press the P key once; then release both keys.

To switch printer-echo off, simply press [Ctrl] P again.

Until you cancel the first [Ctrl] P by pressing [Ctrl] P a second time, *everything* which is written to the screen (including > prompts, control codes, and error messages) will be printed-out by the printer. (Note that pressing [Ctrl] P doesn't itself produce a printed character on the screen.)

To experiment with printer-echo, press [Ctrl] P and type:

```
DIR
```

....then press [Ctrl] P again.

Printing a screen dump

(Providing the facility is installed within the operating system you are currently using on your PC), you may *dump* the entire contents of the screen (as you see it) to the printer, using the  (shift) [Prt Sc] function.

Simply hold down the  (shift) key and press the [Prt Sc] key once.

For detailed graphics screens, use the utility GRAPHICS (see your DOS manual) first.

Printing GEM files

GEM files may be printed-out using the 'Print Spooler' or 'Output' option from the GEM Desktop menu. For further information, see your PC manual.

Printing DOS Plus and CP/M files

Under the DOS Plus and CP/M operating systems, files may be sent to the printer using the PIP command. The form of the command is:

```
PIP LST:=[<drive>:]<filename>
```

Example command:

```
PIP LST:=a:autoexec.bat
```

....which will print the file 'autoexec.bat' (if it is present on the disk currently in Drive A:).

Unlike MS-DOS and PC-DOS, you may NOT specify wildcards within the filename using the above command.

Back to BASICS

Welcome back to those of you who skipped here from earlier in the chapter. We are now going to explore the features of the LQ3500 and you should note that from here-on, all the example commands will be shown in BASIC.

So, if you haven't already done it, now is a good time to start up BASIC on your PC and get ready to type in some commands.

The print buffer

Before printing any characters on the paper, the printer stores incoming information in an area of its own memory called the *print buffer*. In previous examples, the reason that the printer has printed-out everything it has been instructed to (rather than holding it in the buffer) is because each print statement has been automatically followed by a carriage return and line feed (this is executed by default) which has the action of emptying (or *flushing*) the buffer.

To explain the above, compare the following:

```
10 LPRINT 123
20 LPRINT 456
30 LPRINT 789
```

RUN

When you run this program, the LQ3500 prints-out:

```
123
456
789
```

Now modify lines 10 and 20 as follows, and run the program again:

```
10 LPRINT 123;
20 LPRINT 456,
30 LPRINT 789
```

RUN

This time, you will see that the LQ3500 prints-out:

```
123 456      789
```

The numbers have been printed-out on one line because the semicolon and comma have suppressed the carriage return/line feed to the printer. The data to be printed (in lines 10 and 20) have been held inside the print buffer until the whole line has been printed-out by an 'un-suppressed' LPRINT command (line 30).

REMEMBER: The LPRINT command (when it is not terminated by a semicolon or comma) automatically executes a carriage return and line feed.

Note that the buffer will always be flushed under the following conditions:

1. When the printer is set off line.
2. When the printer receives a line feed.
3. When the buffer is full.
4. When the pitch or print style is changed.

Default character set

By default, the LQ3500 is supplied to you factory-set to reproduce the Epson-style character set as detailed in appendix 2.

Type in the following test program to print-out part of the default character set:

```
10 FOR n=32 TO 126
20   LPRINT CHR$(n);
30 NEXT
40 :
50 FOR n=160 TO 254
60   LPRINT CHR$(n);
70 NEXT
80 LPRINT
```

RUN


```
!"#$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNopQRSTUVWXYZ[\]^_`abcdefghijklmnopqrstuvwxyz{|}~ !"#$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMNopQRSTUVWXYZ[\]^_`
abcdefghijklmnopqrstuvwxyz{|}~
```

The quality of the output can be changed by using a series of miniature switches (called DIP switches) at the rear of the printer.

As well as choosing between standard typeface (draft quality) and letter quality, you can also select character sets for various countries, choose whether the zero has a slash through it, silence the bleeper, and other such things.

How to adjust the DIP switches

IMPORTANT: Always switch the printer off before adjusting the DIP switches. Apart from any electrical considerations, the settings of the DIP switches are scanned only when the machine is first switched on.

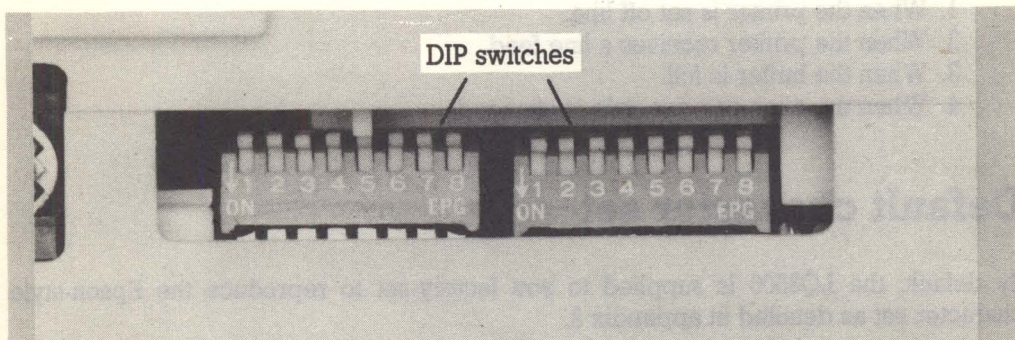

If you look carefully, you will note that there are 3 blocks (or banks) of 8 switches each. Each individual switch is numbered, and on the corner of each bank, you will see the word 'ON' (showing you the direction to switch on).

Switch number 7 in bank 1 is the one that changes the quality of the print. If you want to print fast, set it to 'OFF'. If quality is more important to you than speed, set it to 'ON'. For the moment, let's leave it in the 'OFF' position.

NOTE: The default character set may be selected via software. This method is described in chapter 6 ahead, under the section entitled 'Character table selection'.

(You will often hear the term *ASCII* used when referring to characters or character sets - note that ASCII stands for American Standard Code for Information Interchange.)

International characters

If you are using a PC, then just select IBM character set #2 on your LQ3500, and the applications software (eg. your word processor package) will automatically print-out international characters when required.

If your LQ3500 is connected to a *non PC-compatible* computer (or a PC running applications software that is only able to handle 7-bit characters), then in order to print international characters, you must use certain characters which may take on a number of different 'identities'. To illustrate, type in the command:

```
LPRINT "#"
```

The LQ3500 will print-out:

```
#
```

The # hash sign is printed-out because the LQ3500 is supplied to you factory-set to reproduce the *USA* character set by default (see the table on page 32).

Now look at the fourth row down on that table. In the first column (next to 'UK') you will see a £ pound sign. This means that if the LQ3500 is set to reproduce the *UK* character set, you will be able to print £ pound instead of # hash.

The three DIP switches that control the selection of international character sets are numbers 1, 2 and 3 on the first bank (DS1). Using the same convention as before, these switches will be referred to as DS1-1, DS1-2 and DS1-3.

The following table indicates the settings of DS1-1, DS1-2 and DS1-3 to select the required international characters:

COUNTRY	DS1-1	DS1-2	DS1-3
USA	OFF	OFF	OFF
France	OFF	OFF	ON
Germany	OFF	ON	OFF
UK	OFF	ON	ON
Denmark	ON	OFF	OFF
Sweden	ON	OFF	ON
Italy	ON	ON	OFF
Spain	ON	ON	ON

Switch the printer off and adjust the DIP switches to the *UK* setting (DS1-1 off, DS1-2 on, DS1-3 on), then switch the printer on again.

Again, type in the command:

LPRINT "#"

....and you will see that the LQ3500 has now printed-out:

£

Here is a table of the available international characters:

	CHARACTER CODE (HEX)											
	&23	&24	&40	&5B	&5C	&5D	&5E	&60	&7B	&7C	&7D	&7E
USA	#	\$	@	[	\	]	^	`	{		}	~
France	#	\$	à	•	ç	§	^	`	é	ù	è	..
Germany	#	\$	ß	Ä	Ö	Ü	^	`	ä	ö	ü	β
UK	£	\$	@	[	\	]	^	`	{		}	~
Denmark	#	\$	@	Æ	Ø	Å	^	`	æ	ø	å	~
Sweden	#	¤	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
Italy	#	\$	@	•	\	é	^	ù	à	ò	è	ì
Spain	Pt	\$	@	í	Ñ	¿	-	`	„	ñ	}	~

NOTE: International character sets may also be selected via software. This method is described in chapter 6 ahead, under the section entitled 'International character set selection'.

You may now re-adjust the settings of DS1-1, DS1-2, DS1-3 (international characters) to suit your particular printing requirements.

(The functions of the remaining DIP switches (DS1-4 to DS1-8, and DS2-1 to DS2-8) are described in chapter 7 of this manual.)

How to change to an alternative typeface

The LQ3500 is capable of reproducing many combinations of different print style, or 'typeface'.

Here's one to try out. Type in:

```
LPRINT CHR$(27) + "x" + CHR$(1)
LPRINT "This is LQ printing"
```

Look at the printing. If all went well, you should have selected the LQ (Letter Quality) typeface.

(If LQ printing hasn't been produced, check that you correctly typed in the above command, using a lower-case "x". If you can see the "x", you have the CHR\$(27)+bit wrong.)

To cancel the LQ setting, type in:

```
LPRINT CHR$(27) + "x" + CHR$(0)
LPRINT "this is standard printing"
```

To select and cancel the LQ setting, we have used what's known as a control code.

What is a control code?

Good question. A control code is a special character used to call into action a function of the computer, while the code itself is not generally printed. CHR\$(7) is a control code that makes the computer or the printer 'bleep'. Just try:

```
PRINT CHR$(7)
```

....or....

```
LPRINT CHR$(7)
```

Now take a look at the commands we used to select and cancel LQ printing. Notice that the first LPRINT statement had three parts (which were joined to each other by + plus signs). The three parts were:

1. CHR\$(27)
2. "x"
3. CHR\$(1)or.... CHR\$(0)

Explanation:

CHR\$(27) The CHR\$(27) part is known as an 'escape code' (often shortened to ESC), and tells the printer that what follows is NOT to be printed-out, but is to be used for enabling or disabling one of the printer's functions. A sequence of instructions starting with CHR\$(27) is known as an 'escape sequence'.

"x" The "x" part of the command is the individual code-letter appertaining to LQ operation. As you work through this guide, you will see that each particular printer function has its own code-letter.

CHR\$(1) The CHR\$(1) or CHR\$(0) part can be thought of as a switch to turn the particular function on or off. As you can see from the above examples, CHR\$(1) switches the function on; CHR\$(0) switches it off.
....or....
CHR\$(0)

NOTE: In many of the examples that follow, the ASCII codes 'SOH' and 'NUL' are shown. These codes should be typed in as CHR\$(1) and CHR\$(0) respectively.

NOTE: A 'shorthand' means of combining escape code parameters such as "x" + CHR\$(1) (shown in the previous example) is to simply type in "x1", ie. to select LQ, type:

LPRINT CHR\$(27) + "x1"

....and to cancel LQ, type:

LPRINT CHR\$(27) + "x0"

Note that this shorthand technique does not work with all escape sequences. If you want to know whether it works with the sequence you are using, look it up in the relevant section.

Chapter 3

Selecting print styles....

Subjects covered in this chapter:

- Choice of styles
- Cancelling your choice
- Combined styles
- Illegal combinations

Choice of style

The LQ3500 is capable of over 100 different print style combinations. There are five main typefaces, known as:

- Standard** (sometimes known as 'Pica')
- Mini** (sometimes known as 'Elite')
- Condensed**
- Proportional**
- LQ**

To these main typefaces, you may apply the following additional functions:

- Subscript**
- Superscript**
- Double-strike**
- Italics**
- Bold**

Finally, to any of the above combinations of typeface, you may apply:

- Underline**
- Double-width**

As you can see, there are lots of typefaces for you to choose from, and it's easy to get lost in a maze of combinations! It is perhaps worth remembering, therefore, that you can always get back to standard typeface (with no modifications) by switching the printer off, then on again.

The printer has a built-in memory of its own, so switching off your *computer* will NOT alter the printer's settings. Switching a PC off and on again will reset the printer, but this is an exception and most other computers don't do this.

Selecting one of the main typefaces

Before we discuss all the different possible combinations of typeface and how to select them, let's start with the five main typefaces.

In each case, you will be shown the control code required to select or cancel the typeface, some explanation of what is going on, and an example command.

Standard typeface

Standard typeface is automatically selected when the printer is first switched on, or when any combination of other typeface settings are cancelled. It is the one typeface that you do not have to explicitly *select*.

Mini typeface

TO SELECT: ESC M

This means that the printer is now printing 12 CPI (characters per inch). Sometimes this is known as 'Elite pitch'.

Example command:

```
LPRINT CHR$(27) + "M"  
LPRINT "this is mini typeface"
```

TO CANCEL: ESC P

This sequence tells the printer to print 10 CPI. This is sometimes known as 'Pica pitch'.

Example command:

```
LPRINT CHR$(27) + "P"  
LPRINT "this is standard typeface again"
```

Proportional typeface

TO SELECT: ESC p SOH

When the printer prints with a proportional typeface, it adjusts the distance between characters to something more aesthetically pleasing than a constant, say 1/10th of an inch. This stops characters such as 'l's looking 'stranded' and 'm's looking crushed together.

Another effect of this command is that it automatically switches the printer into LQ (Letter Quality) output, as this mode is the one usually used to print-out letters. It is not possible to print in proportionally spaced standard typeface.

Instead of NUL and SOH, "0" or "1" can be used.

Example command:

```
LPRINT CHR$(27) + "p" + CHR$(1)
LPRINT "this is the proportional typeface"
```

TO CANCEL: ESC p NUL

This is the proportional spacing being switched off. If LQ text was not switched on before the proportional typeface was started, then it will return to standard typeface again.

Example command:

```
LPRINT CHR$(27) + "p" + CHR$(0)
LPRINT "this is standard typeface again"
```

Condensed typeface

TO SELECT: SI (or ESC SI)

This roughly doubles the number of characters packed into an inch. More precise figures are: 20 CPI when in Mini, and 17.14 CPI when in standard. It has no effect in LQ mode, or on downloaded characters.

Example command:

```
LPRINT CHR$(15)
LPRINT "this is condensed typeface"
```

TO CANCEL: DC2

This turns the condensed mode off again.

Example command:

```
LPRINT CHR$(18)
LPRINT "this is standard typeface again"
```

LQ typeface

TO SELECT: ESC x SOH

This selects the printer's LQ (Letter Quality) mode, just as we did in the introduction. This is much slower than the draft mode, but the quality is much better. On the LQ3500, the print head only has to pass across the paper once to produce high-quality text, instead of 'building up' the text on successive passes.

Instead of NUL and SOH, "0" or "1" can be used.

Example command:

```
LPRINT CHR$(27) + "x" + CHR$(1)
LPRINT "this is LQ typeface"
```

NOTES: The LQ typeface may be manually selected by holding down the FF button while the printer is on line. The printer will bleep twice to indicate that LQ mode has been selected.

To select standard typeface again, hold down the LF button while the printer is on line. This time, the printer will bleep once to indicate that standard typeface has been re-selected.

Do not be surprised if some well-meaning word processor comes along and resets the printer after you have set it into LQ mode!

TO CANCEL: ESC x NUL

Example command:

```
LPRINT CHR$(27) + "x" + CHR$(0)
LPRINT "this is standard typeface again"
```

Selecting additional functions

Having selected your main typeface, you may now modify it using the additional options available. Remember though, not all typestyles can be modified in every way.

Subscript option

TO SELECT: ESC S SOH

This compacts the characters into the bottom half of the line, and is useful for producing such effects such as H₂O. For maximum effect, it is best to combine this with condensed text.

Turning on the subscript option automatically turns off the superscript option. Subscripted superscript doesn't really make sense, does it?

Instead of NUL and SOH, "0" or "1" can be used.

Example command:

```
LPRINT CHR$(27) + "S" + CHR$(1)
LPRINT "this is subscript option"
```

TO CANCEL: ESC T

This turns off the subscript text. It is also used to turn off the superscript text option (that comes next).

Example command:

```
LPRINT CHR$(27) + "T"
LPRINT "option cancelled"
```

Superscript option

TO SELECT: ESC S NUL

This is like the subscript option, but compacts the characters into the top half of the line, and is useful for producing such effects such as r^2 . For maximum effect, it is best to combine this with condensed text.

Example command:

```
LPRINT CHR$(27) + "S" + CHR$(0)
LPRINT "this is superscript option"
```

TO CANCEL: ESC T

This is exactly the same as cancelling the subscript option.

Example command:

```
LPRINT CHR$(27) + "T"
LPRINT "option cancelled"
```

Double strike option

TO SELECT: ESC G

This makes the LQ3500 print any subsequent characters *twice* to make it appear bolder. Bit image graphics are not affected by this mode.


```
LPRINT CHR$(27) + "G"
LPRINT "this is double strike option"
```

This turns off double strike.

```
LPRINT CHR$(27) + "H"  
LPRINT "option cancelled" "T" + (C5)PRINT CHR$(27) + "H"
```

JUN 2 1952

This makes all the characters lean slightly to the right. Very useful for *emphasising* things.

In Epson-type mode, this has much the same effect as the `ESC >` command. However, that method won't work in IBM-type mode (see the `ESC t` command for details on how to do that).

```
LPRINT CHR$(27) + "4"  
LPRINT "this is italics option"
```

This puts the italics text straight again. If the text was being forced into italic by the ESC > command, this command won't do the job; the ESC = command must be used.

```
LPRINT CHR$(27) + "5"  
LPRINT "option cancelled"
```

Sometimes known as 'emphasised' print. Like the double strike option, this prints any subsequent characters twice, however, the second time, they are printed slightly off-centre to produce a thicker looking character. Bit image graphics are not affected by this mode.

TO SELECT: ESC E

Example command:

```
LPRINT CHR$(27) + "E"  
LPRINT "this is bold option"
```

TO CANCEL: ESC F

This turns off the bold option.

Example command:

```
LPRINT CHR$(27) + "F"  
LPRINT "bold option cancelled"
```

Selecting underline or double-width printing

Both underline and double-width printing may be added to any of the available combinations of typeface.

Underline option

TO SELECT: ESC - SOH

This underlines all subsequent characters, the line being placed just underneath the lowest point of any character. The underline is actually drawn by a separate pass of the print head.

This command will not work during any bit image graphics mode, and is not affected by the double strike option.

Instead of NUL and SOH, "0" or "1" can be used.

Example command:

```
LPRINT CHR$(27) + "-" + CHR$(1)  
LPRINT "this is underline option"
```

TO CANCEL: ESC - NUL

This turns off the underline option.

Example command:

```
LPRINT CHR$(27) + "-" + CHR$(0)  
LPRINT "underline option cancelled"
```

Double-width option (one line)

TO SELECT: SO

This, as its name suggests, makes all subsequently printed characters twice as wide as they normally are. It only lasts until the end of the line, so it will stop on: carriage return, line feed, vertical tab, form feed or a DC4 code. It is also cancelled when the text is too long and wraps round onto the next line.

Example command:

```
LPRINT CHR$(14)
LPRINT "this is double width option"
```

TO CANCEL: DC4

This is used when you want to turn off the double width option partway along the line.

Example command:

```
LPRINT CHR$(20)
LPRINT "option cancelled"
```

Double-width option (continuous)

TO SELECT: ESC W SOH

Like the previous double width command, this makes all the subsequently printed characters twice as wide as they normally are. Unlike the previous command, however, this one lasts until the printer is reset or the cancel double width command (ESC W NUL) is used.

Instead of NUL and SOH, "0" or "1" can be used.

Example command:

```
LPRINT CHR$(27)+"W"+CHR$(1)
LPRINT "this is double width option"
```

TO CANCEL: ESC W NUL

This is used when you want to turn off the double width option which lasts for more than one line.

Example command:

```
LPRINT CHR$(27)+"W"+CHR$(0)
LPRINT "option cancelled"
```

Combining styles

Now that you know how to access each of the different typefaces, you might like to combine a few of them.

Make sure that your printer is set to standard typeface with no additional style options selected - (if in doubt, switch the printer off, then on again).

Example command (using mini typeface with italics and underline):

```
LPRINT CHR$(27) + "M" + "You can emphasise a point using" +  
CHR$(27) + "4" + " italics" + CHR$(27) + "5" + " or" +  
CHR$(27) + "-" + CHR$(1) + " underline" + CHR$(27) + "-" +  
CHR$(0) + CHR$(27) + "P"
```

Make sure that you type it all in as one line.

Note that each of the typefaces and options selected in this example are cancelled after use. If you don't cancel them, they will be used in the next print statement.

Studying the above example, you could be forgiven for thinking that it looks muddled, and that it is difficult to pick out your typeface selections.

A solution to this problem is to first assign the escape codes into string variables as follows:

```
ms$ = CHR$(27) + "M"           :REM (mini select)  
mc$ = CHR$(27) + "P"           :REM (mini cancel)  
is$ = CHR$(27) + "4"           :REM (italics select)  
ic$ = CHR$(27) + "5"           :REM (italics cancel)  
us$ = CHR$(27) + "-" + CHR$(1) :REM (underline select)  
uc$ = CHR$(27) + "-" + CHR$(0) :REM (underline cancel)
```

....and thereafter use the string variables' names to select or cancel a particular typeface. Our above example then looks like this:

```
LPRINT ms$ + "You can emphasise a point using" + is$ +  
"italics" + ic$ + " or" + us$ + " underline" + uc$ + mc$
```

Now that's much simpler, isn't it?

In addition to this line, you could use the escape code variables in all subsequent print statements. It's a good idea to have a ready-written program or routine like this to call upon when you're printing in various styles; no doubt you'll incorporate something along these lines into your own text creation utility program.

If you want, you could even define a replacement for CHR\$(27) as, say, e\$. We do this in the next example.

So then, let's create the beginnings of such a program. We'll use the above escape code variables and add a few more typefaces and options as we go along. Furthermore, to save you repeatedly typing in `CHR$(1)` and `CHR$(0)`, we have assigned these characters to the variables `s$` and `n$` respectively. Line numbers have also been added in case you wish to run the program more than once or save it. (Note that you need not type in the `REM` statements, they're just there to make the example clearer.)

```

10 REM printer control codes
20 e$ = CHR$(27)      : REM escape (ESC character)
30 s$ = CHR$(1)        : REM on (SOH character)
40 n$ = CHR$(0)        : REM off (NUL character)
50 ms$ = e$ + "M"      : REM (mini select)
60 mc$ = e$ + "P"      : REM (mini cancel)
70 is$ = e$ + "4"      : REM (italics select)
80 ic$ = e$ + "5"      : REM (italics cancel)
90 us$ = e$ + "-" + s$  : REM (underline select)
100 uc$ = e$ + "-" + n$ : REM (underline cancel)
110 ws$ = CHR$(14)     : REM (double width select)
120 wc$ = CHR$(20)     : REM (double width cancel)
130 cs$ = CHR$(15)     : REM (condensed select)
140 cc$ = CHR$(18)     : REM (condensed cancel)

```

RUN

Now try this example immediately after running the above program. Remember, this is all one line:

```

LPRINT ms$ + "You can emphasise a point using " + is$ +
"italics " + ic$ + "or " + us$ + "underline." + uc$ + "You
can also spread out a bit using " + ws$ + "double width
characters, " + wc$ + mc$ + cs$ + "or even hide something in
the small print! " + cc$

```

If you do this again, but in `LQ` mode, you will notice that the pitch changes and condensed print mode do not work. That is because these modes are an *illegal combination* (more about these at the end of this chapter).

Subscripts and superscripts

Add the following to your escape code variables program:

```

150 lss$ = e$ + "x" + s$ : REM (LQ select)
160 lsc$ = e$ + "x" + n$ : REM (LQ cancel)
170 sbs$ = e$ + "S" + s$ : REM (subscript select)
180 sps$ = e$ + "S" + n$ : REM (superscript select)
190 ssc$ = e$ + "T"      : REM (subscript and superscript cancel)

```

RUN

(Note that the string variable `ssc$` cancels *both* the subscript and superscript options.)

Example command (using LQ-standard typeface with subscripts and superscripts):

```
LPRINT lss$ + "Subscripts include H" + sbs$ + "2" + ssc$ +  
"0 and Log" + sbs$ + "10" + ssc$ + ", while superscripts  
include 10" + sps$ + "-3" + ssc$ + " and 100" + sps$ + "o" +  
ssc$ + "C." + lsc$
```

A few more assorted typefaces for your program:

```
200 ps$ = e$ + "p" + s$ : REM (proportional select)  
210 pc$ = e$ + "p" + n$ : REM (proportional cancel)  
220 ds$ = e$ + "G"      : REM (double strike select)  
230 dc$ = e$ + "H"      : REM (double strike cancel)  
240 bs$ = e$ + "E"      : REM (bold select)  
250 bc$ = e$ + "F"      : REM (bold cancel)
```

RUN

Example commands (using proportional, double strike, italics, and bold typefaces):

```
LPRINT ps$ + "Liberal supporters will favour the  
proportional representation of their print-out" + pc$  
LPRINT "Trade unionists will vote for the " + ds$ + "double  
strike " + dc$ + "option"  
LPRINT "Journalists will probably take a " + is$ + "slanted"  
ic$ + " view"  
LPRINT "Your mission: " + bs$ + "to boldly print like no  
other printer" + bc$
```

In addition to the individual commands shown in this chapter, you may also select from a limited range of typeface combinations using the single escape code `ESC ! <n>`. This code is described in chapter 6 under the section entitled 'Print mode selection'.

Illegal combinations -what you can and can't do

All print styles will support underlining, double width, double strike, emphasised print, superscript, subscript and italics.

Selecting proportional spacing mode automatically sets LQ mode, and inherits all its restrictions.

LQ is always in either standard pitch or proportional spacing, double width is supported, but not condensed.

(Note that the string variable `sect` contains both the subscript and superscript options.)

Example command (using IQ-standard typeface with subscript and superscript):

```
PRINT sect + "Subscript: include H" + sect + "S" + sect +
"0 and log" + sect + "10" + sect + " ", while superscripts
include "0" + sect + "1" + sect + "2" + sect + "3" + sect + "4" +
sect + "5" + sect
```

A few more assorted typefaces for your program:

```
250 pct = pct + "q" + pct : REM (proportional select)
270 pct = pct + "p" + pct : REM (proportional cancel)
290 pct = pct + "c" + pct : REM (double strike select)
310 pct = pct + "h" + pct : REM (double strike cancel)
330 pct = pct + "e" + pct : REM (bold select)
350 pct = pct + "f" + pct : REM (bold cancel)
```

RUN

Example commands (using proportional, double strike, italics and bold typefaces):

```
PRINT pct + "Liberal supporters will favour the  
proportional representation of their print-out" + pct  
PRINT "Trade unionists will vote for the " + pct + "double  
strike " + pct + "option"  
PRINT "Journalists will probably take a " + pct + "planted  
pct + "view"  
PRINT "Your mission: " + pct + "to boldly print like no  
other printer" + pct
```

In addition to the individual commands shown in this chapter, you may also select from a limited range of typeface combinations using the single escape code `ESC ! m`. This code is described in chapter 6 under the section entitled 'Print mode selection'.

Illegal combinations - what you can and can't do

All print styles will support underlining, double width, double strike, emphasised print, superscript, subscript and italics.

Selecting proportional spacing mode automatically sets IQ mode, and inherits all its restrictions.

IQ is always in either standard pitch or proportional spacing, double width is supported, but not condensed.

Chapter 4

Print formatting control....

Subjects covered in this chapter:

- Print head movement
- Form feed
- Margin setting
- Page length setting
- Perforation skipping
- Tabulation
- Text justification
- Paper feed rate adjustment
- Inter-character spacing

NOTE: If, in the examples ahead, you wish to follow a control code by your own further printer instructions, then you should terminate the code with a semicolon to suppress the carriage return/line feed which will otherwise be automatically sent after the code.

Carriage return

This code sends the print head back to the beginning of the line, ready to start printing at the left-hand margin. If DS2-2 is set on, the printer automatically follows this code with a line feed.

TO SELECT: CR

Example command:

```
LPRINT CHR$(13)
```

Note: This command and line feed (below) both cancel the double width print mode set by the SO code.

Line feed

This code feeds the paper up by one line so that the print head is ready to start printing on the next line. Line feed has the additional effect of outputting the contents of the buffer.

TO SELECT: LF

Example command:

```
LPRINT CHR$(10)
```

Backspace

This code moves the print head one space to the left.

TO SELECT: BS

Example command:

```
LPRINT CHR$(8)
```

Note that backspace will not operate under the following circumstances:

1. When in centre, right and full justification modes.
2. Immediately after graphics printing.
3. At the left margin.
4. Past a point where the print mode was changed.
5. After a horizontal positioning command or HT code

Form feed

This code moves the print head to the start of the next page. It can be thought of as 'start a new page'. Form feed is always accompanied by a carriage return.

TO SELECT: FF

Example command:

```
LPRINT CHR$(12)
```

Print head positioning

The print head can also be moved in a more advanced manner to an exact location on the line. This is done with an accuracy of 1/60 inch and starts from the current left margin.

TO SELECT: ESC \$ <n1> <n2>

Here, <n1> is between 0 and 255; <n2> is between 0 and 3. The number of 1/60 inch units moved is: ($\text{<n2>} * 256 + \text{<n1>}$).

It can also be moved to an exact position from where it is already. This is also done with an accuracy of 1/60 inch.

Example command:

```
LPRINT "This is about" + CHR$(27) + "$" + CHR$(30) +  
CHR$(0) + "half an inch"
```

TO SELECT: ESC \ <n1> <n2>

This moves the print head on ($\text{<n2>} * 256 + \text{<n1>}$) 'dots'. A 'dot' varies from 1/120 inch in standard or mini, to 1/180 inch in LQ, to 1/240 inch in condensed.

Example command:

```
LPRINT "This is about" + CHR$(27) + "\" + CHR$(60) +  
CHR$(0) + "half an inch"
```

Margins

The width of the page can be set by altering the margins outside of which the printer will not print:

Left margin setting

This code sets the left hand margin to the value of <n> (in the range 0 to 255). The value <n> represents the number of character columns from the left hand edge of the printer.

TO SELECT: ESC l <n>

Example command:

```
LPRINT CHR$(27) + "l" + CHR$(20)
```

Right margin setting

This code sets the right hand margin to the value of <n> (in the range 1 to 255). The value <n> represents the number of character columns from the *left* hand edge of the printer.

TO SELECT: ESC Q <n>

Example command:

```
LPRINT CHR$(27) + "Q" + CHR$(50)
```

Note that if the right hand margin is set to a value which is less than (or equal to) the left hand margin, then the right hand margin setting will be ignored.

Page length setting (by lines)

This code sets the page length to the value of <n> (in the range 1 to 127). The value <n> represents the number of lines per page. Note that changing the paper feed setting (described ahead) will not alter the page length.

TO SELECT: ESC C <n>

Example command:

```
LPRINT CHR$(27) + "C" + CHR$(15)
```

Page length setting (by inches)

This code sets the page length to the value of <n> (in the range 1 to 22). The value <n> represents the number of inches per page.

TO SELECT: ESC C NUL <n>

Example command:

```
LPRINT CHR$(27) + "C" + CHR$(0) + CHR$(4)
```

Skip perforation setting

When using continuous stationery (such as fan fold/tractor feed paper) the printer can be set to skip a number of lines when it reaches the foot of a page in order to avoid printing directly over the perforations in the paper.

This code sets skip perforation to the value of <n> (in the range 1 to 127). The value <n> represents the number of lines to be skipped at the foot of a page. This value is deducted from the page length setting (in lines or inches) if previously set.

TO SELECT: ESC N <n>

Example command:

```
LPRINT CHR$(27) + "N" + CHR$(5)
```

TO CANCEL: ESC 0 (note that this is the *capital letter* 0)

Example command:

```
LPRINT CHR$(27) + "0"
```

Tabulation

It is possible to set up variable positions to which the print head can be moved. These are called tabulation settings or 'tabs' for short. Tabs can be set for vertical and horizontal positions. Once the tab positions have been set, the print head is sent to that position by the appropriate tab jump command.

The LQ3500 has an additional feature allowing vertical tabs to be set in different *channels*. A channel can then be selected and the tab settings for that channel used.

Horizontal tab setting

This code sets the horizontal tab positions. Up to 32 tab positions may be specified (each in the range 1 to 137).

TO SELECT: ESC D <n1> <n2> <n3>etc.... <n32> NUL

The value of <n2> should be greater than the value of <n1>, <n3> should be greater than <n2>, <n4> should be greater than <n3>, and so on. The sequence of tab numbers must be terminated by CHR\$(0).

(When the printer is first switched on, horizontal tabs default to every 8 character positions.)

Example command:

```
LPRINT CHR$(27) + "D" + CHR$(10) + CHR$(20) + CHR$(0)
```

Horizontal tab jump

This code sends the print head to the next horizontal tab position. It is ignored when more tabs have been sent than tab stops and in centre, right or full justification.

TO SELECT: HT

Example command:

```
LPRINT CHR$(9)
```

Vertical tab setting

This code sets the vertical tab positions. Up to 16 tab positions may be specified (each in the range 1 to 254).

TO SELECT: ESC B <n1> <n2> <n3>etc.... <n16> NUL

The value of <n2> should be greater than the value of <n1>, <n3> should be greater than <n2>, <n4> should be greater than <n3>, and so on. The sequence of tab numbers must be terminated by CHR\$(0).

(When the printer is first switched on, vertical tabs default to single line feeds.)

Example command:

```
LPRINT CHR$(27) + "B" + CHR$(10) + CHR$(20) + CHR$(0)
```

Vertical tab jump

This code sends the print head to the next vertical tab position.

Example command:

```
LPRINT CHR$(11)
```

Tab channel setting

There are eight channels for which it is possible to set up to 16 vertical tab positions each. This feature is intended for applications where more than one type of page format is being used within a document. To use this feature, you should first set up the channel and tab settings (using ESC b <channel> <n1>etc.... NUL) for each of the required channels. You may thereafter select the appropriate channel (using ESC / <channel>) when you wish to call up a new set of tabs, and use the vertical tab jump (VT) code to move to the next tab position.

NOTE: If no channel tabs are set up or selected, channel 0 is assumed.

TO SELECT: ESC b <channel> <n1> <n2> <n3>etc.... <n16> NUL

The <channel> parameter must be in the range 0 to 7.

The value of <n2> should be greater than the value of <n1>, <n3> should be greater than <n2>, <n4> should be greater than <n3>, and so on. The sequence of tab numbers must be terminated by CHR\$(0).

Example command:

```
LPRINT CHR$(27) + "b" + CHR$(7) + CHR$(10) + CHR$(20) +  
CHR$(0)
```

Channel selection

This code selects the tab channel to be used (in the range 0 to 7).

TO SELECT: ESC / <channel>

Example command:

```
LPRINT CHR$(27) + "/" + CHR$(7)
```

All subsequent vertical tab jump (VT) codes will move the print head to the next vertical tab position for that particular channel.

Text justification

Text can be automatically justified by the printer. The text can be made to fit to the left-hand side, the right-hand side, in the centre or to both margins (fully justified). This can greatly simplify word processing.

TO SELECT: ESC a <n>

Where:

<n>	Justification
0	Left
1	Centre
2	Right
3	Full

Example commands:

```
LPRINT CHR$(27)+ "a" +CHR$(0)  
LPRINT "left justified text"
```

```
LPRINT CHR$(27)+ "a" +CHR$(1)  
LPRINT "this is centered"
```



```
LPRINT CHR$(27)+ "a" +CHR$(2)
LPRINT "now to the right"
LPRINT CHR$(27)+ "a" +CHR$(3)
LPRINT "if this text goes on long enough, it will end
up perfectly justified at both margins (one hopes)".
Add some more to it if it doesn't quite reach."
```

Paper feed rates

When the printer is switched on, the paper feed rate defaults to $\frac{1}{6}$ inch per line. However, the amount of paper fed per line can be altered using the following commands:

$\frac{1}{8}$ inch paper feed

TO SELECT: ESC 0 (note that this is the *number* 0)

Example command:

```
LPRINT CHR$(27) + "0"
```

$\frac{1}{6}$ inch paper feed (default)

TO SELECT: ESC 2

Example command:

```
LPRINT CHR$(27) + "2"
```

Variable $\frac{n}{180}$ inch paper feed

This code sets the paper feed rate to $\frac{n}{180}$ inch. The value of n may be in the range 0 to 255.

TO SELECT: ESC 3 n

Example command:

```
LPRINT CHR$(27) + "3" + CHR$(27)
```

Variable $\langle n \rangle/60$ inch paper feed

This code sets the paper feed rate to $\langle n \rangle/60$ inch. The value of $\langle n \rangle$ may be in the range 0 to 85.

TO SELECT: ESC A $\langle n \rangle$

Example command:

```
LPRINT CHR$(27) + "A" + CHR$(18)
```

Variable $\langle n \rangle/180$ inch one-shot forward feed

This code executes a once-only forward paper feed of $\langle n \rangle/180$ inch. The value of $\langle n \rangle$ may be in the range 0 to 255.

TO SELECT: ESC J $\langle n \rangle$

Example command:

```
LPRINT CHR$(27) + "J" + CHR$(216)
```

Variable $\langle n \rangle/180$ inch one-shot reverse feed

This code executes a once-only reverse paper feed of $\langle n \rangle/180$ inch. The value of $\langle n \rangle$ may be in the range 0 to 255.

TO SELECT: ESC j $\langle n \rangle$

Example command:

```
LPRINT CHR$(27) + "j" + CHR$(108)
```

WARNING: Do not attempt a reverse paper feed while printing within the top 30mm or the bottom 80mm of the paper, (or within 30mm of the perforations on tractor feed paper).

Inter-character spacing

This advances the print head a specified number of 'dots' to the right after each character is printed. The exact size of a 'dot' varies from 1/120 inch in standard or mini, to 1/180 inch in LQ, and 1/240 inch in condensed mode. Printing in double width will double the size of a dot.

Setting the parameter <n> to zero will put things back to normal.

TO SELECT: ESC SPC <n>

Example command:

```
LPRINT CHR$(27) + " " + CHR$(30) + "Spot the spacing..."
```

Chapter 5

Graphics printing....

Subjects covered in this chapter:

Introduction

Single, double, triple, and quadruple density graphics

Bit image graphics modes

Graphics character alignment

What is graphics printing?

In contrast to normal character printing mode, the LQ3500 offers what's known as 'graphics mode'. When set to this mode, the printer has a different way of interpreting the data it receives; instead of a character being printed *as is*, the data is used to directly control each of the tiny individual 'pins' inside the print head. For each item (byte) of data received, only one line of dots is drawn vertically. Whether or not a dot is drawn depends upon the byte of data sent. Each bit in the byte can be a 1 or a 0; a 1 indicates that a dot should be printed, a 0 indicates that a space should be left. This is known as 'bit image graphics'.

In graphics mode, control codes are also printed as bit image graphics (rather than being executed). This means that the effect of sending, for example, a carriage return or line feed will NOT be to execute the appropriate function, but to actually print-out a series of dots on the paper. Moreover, the graphics mode does NOT itself execute a carriage return and line feed automatically when it reaches the end of a line.

The graphics mode is entered using an escape code. Two further parameters are also included and these tell the printer how much data it should turn into dot graphics before reverting to normal character printing mode (in order to execute a carriage return, line feed, etc.). These parameters are known as <n1> and <n2>. The <n2> parameter represents the number of whole 256-dot portions to be printed, while the <n1> parameter represents the remainder of individual dots. The parameter <n1> should be in the range 0 to 255, and <n2> in 0 to 127.

Hence, for example, if you were specifying a code to produce a graphics dump of a screen image 640 pixels wide, the parameter <n2> would be set to 2 (as there are 2 x 256 in 640), while <n1> would be set to 128 (the remainder). Such an example command may look like this:

```
LPRINT CHR$(27) + "L" + CHR$(128) + CHR$(2)
```

To calculate the values for <n1> and <n2>, you may use the following program:

```

10 INPUT "number of dots";d
20 PRINT "<n1> ="; d MOD 256
30 PRINT "<n2> ="; INT(d/256)

```

RUN

There is a maximum number of dots that can be printed on one line. If the maximum number is exceeded, then the additional data is ignored.

Type in the following example program:

```

10 WIDTH LPRINT 255
20 LPRINT CHR$(27) + "K" + CHR$(126) + CHR$(0);
30 FOR n=1 TO 126
40     LPRINT CHR$(87);
50 NEXT

```

RUN

There are a few points that should be noted about this program:

Firstly, a `WIDTH LPRINT 255` command has been included. This suppresses the automatic generation of carriage return/line feed after a certain number of characters are printed-out. If carriage return/line feed were not suppressed, spurious dot patterns in the printed output graphics would result.

Secondly, the use of a semicolon to terminate the print statement (in line 20) which selects graphics mode is essential, as this suppresses the carriage return/line feed normally executed after a print statement, which again would otherwise result in spurious dot patterns.

We have used 87 as our data in line 40 of the above example. This corresponds to the 8-bit binary number 01010111. Looking at the number in binary form you can see the effect of each 1 and 0 on the result.

The following diagram illustrates how each bit of data relates to a corresponding pin on the print head, which in turn produces a corresponding dot on the paper.

TOP

o Group 1


o
o
o
o
o
o
o
o

o Group 2

o
o
o
o
o
o
o
o

o Group 3

o
o
o
o
o
o
o
o

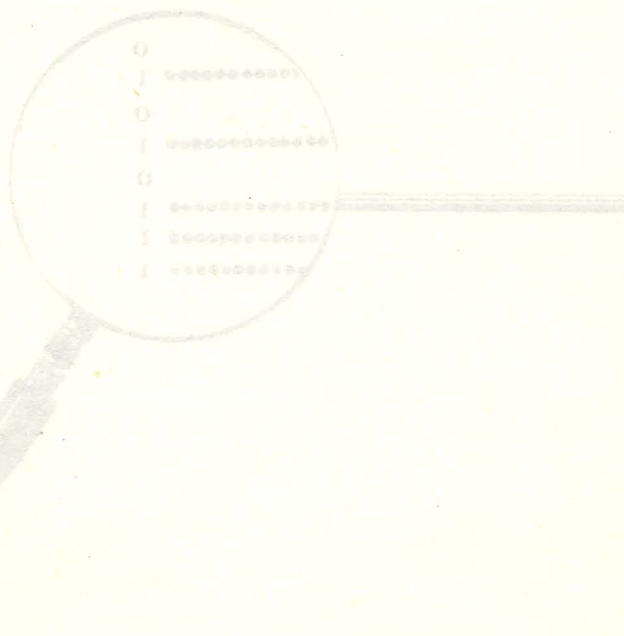


PRINT HEAD

As there are 24 pins, when in an 8-bit mode, every third pin is fired. The print-out will look a little faint, however, if all pins were fired simultaneously, this would rapidly cause overheating of the print head.

When in 24-bit mode, the first packet of 8 bits fires the first 8 pins, the next packet the second, and the next the third. Further data would start the process over again. This mode should not be used to print solid background for too long a time, or the print head will overheat.

In the above example program, therefore, the 8-bit graphics mode is selected in line 20, then the FOR....NEXT loop (lines 30 to 50) prints-out the binary data 01010111 as a column of dots downwards, 126 times along the paper. The result should look like this:

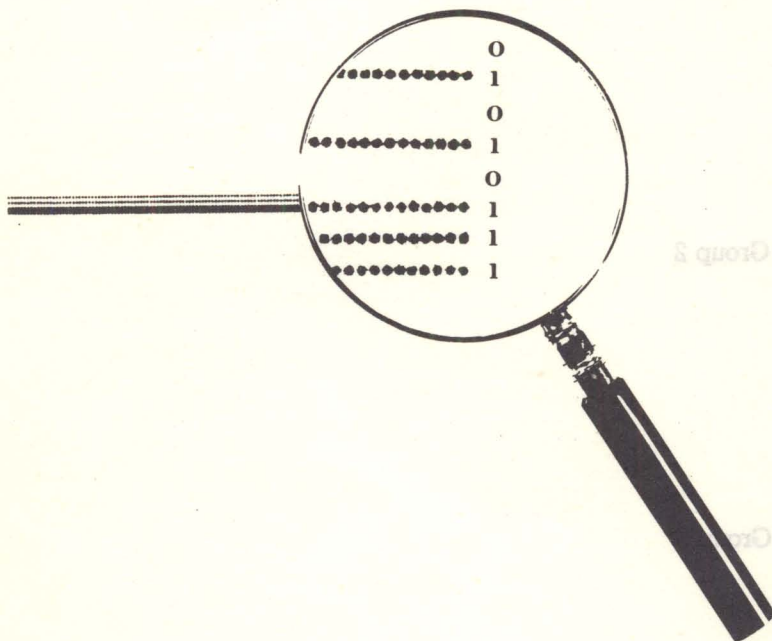

Try experimenting with different numbers in line 40 of the above example program to make sure that you understand the bit-to-dot correspondence.

Graphics modes

There is more than one graphics mode. Each of the modes (summarised below) offer differing combinations of density and speed.

Single density graphics

(Maximum printable positions on a line - 480)

TO SELECT: ESC K <n1> <n2>

Double density graphics

(Maximum printable positions on a line - 960)

TO SELECT: ESC L *<n1>* *<n2>*

Double speed double density graphics

(Maximum printable positions on a line - 960)

TO SELECT: ESC Y *<n1>* *<n2>*

Quadruple density graphics

(Maximum printable positions on a line - 1920)

TO SELECT: ESC Z *<n1>* *<n2>*

Bit image mode

TO SELECT: ESC * *<mode>* *<n1>* *<n2>*

....where the *<mode>* parameter is the required graphics mode (see the following table):

<i><mode></i> 8-Pin 24-pin		Number of dots/8 inch	Connecting dot density/8 inch	Head speed (inch/sec)
0	32	480 single density	480	10.5
1	33	960 double density	960	5.25
2	--	960 double speed/double density	480	10.5
3	--	1920 quadruple density	960	5.25
4	--	640 CRT graphic	640	5.25
6	38	720 CRT graphic	720	5.25
--	39	2448 triple-density	1440	5.25

<n1> must be in the range 0 to 255, *<n2>* in 0 to 127.

Bit image mode selection/change

TO SELECT: ESC ? <code> <mode>

....where the <code> parameter is one of the escape code letters K, L, Y, or Z (described earlier in this chapter), and where the <mode> parameter is in the ranges previously described for the ESC * code.

Graphics character alignment

NOTE: When printing-out graphics characters or boxes whose vertical lines are to be continuous down the page (or when using ready-made graphics characters from IBM character sets #1 and #2), you should additionally select the code for uni-directional printing (ESC U SOH) described in chapter 6 ahead. This will afford more accurate alignment of the vertical lines.

Bit image mode

....where the <mode> parameter is the required graphics mode (see the following table)

mode:	8-pin	34-pin	Number of dots/inch	Connecting dot density/inch	Head speed (inches/sec)
0	—	32	480 single density	480	10.5
1	—	32	960 double density	960	5.25
2	—	—	960 double speed double density	480	10.5
3	—	—	1920 quadrate density	960	5.25
4	—	—	500 CRT graphic	960	5.25
5	32	—	120 CRT graphic	120	5.25
—	32	—	2400 triple-density	1440	5.25

Chapter 6

Extra functions....

Subjects covered in this chapter:

- Printer enable/disable
- Repeating print
- Eighth bit setting
- Reset, paper out, bell, and delete
- Print head control
- Character table selection
- International character sets
- Print mode selection
- User defined characters
- Hexadecimal dump

Printer disable

This code tells the printer to ignore anything that is sent to it from then on (except the printer enable command). Sending this code in the middle of graphics commands, or as a command parameter, will not disable the printer.

This code, and the following printer enable code, only work when DS1-8 is set to on.

TO SELECT: DC1

Example command:

```
LPRINT CHR$(17)
```

TO CANCEL: DC3

Example command:

```
LPRINT CHR$(19)
```

Repeating print

This allows a group of characters or control codes to be printed many times without 'tying up' your computer. Any codes (except another repeating print code) can be used, as long as it all fits into the data buffer.

TO SELECT: ESC V <n> <data> ESC V NUL

Example command:

```
LPRINT CHR$(27) + "V" + CHR$(100)
LPRINT "I must not cheat on my lines."
LPRINT CHR$(27) + "V" + CHR$(0)
```

Set eighth bit

This code sets the eighth bit of every code sent to the printer to 1. In Epson mode, this causes the characters to go into italics.

TO SELECT: ESC >

Example command:

```
LPRINT CHR$(27) + ">"
```

Unset eighth bit

This code sets the eighth bit of every code sent to the printer to 0.

TO SELECT: ESC =

Example command:

```
LPRINT CHR$(27) + "="
```

Accept eighth bit

This code cancels the above (set and unset) commands, directing the printer to accept all eight bits as they are received from the computer.

TO SELECT: ESC #

Example command:

```
LPRINT CHR$(27) + "#"
```

Reset printer

This code resets the printer. The printer will then perform as if it had just been switched on.

TO SELECT: ESC @

Example command:

```
LPRINT CHR$(27) + "@"
```

Paper out sensor disable

This code disables the action of the paper out sensor which halts the printer when there is no paper.

TO SELECT: ESC 8

Example command:

```
LPRINT CHR$(27) + "8"
```

Paper out sensor enable

This code re-enables the action of the paper out sensor.

TO SELECT: ESC 9

Example command:

```
LPRINT CHR$(27) + "9"
```

Bell

This code sounds the printer's internal bleeper. If the DIP switch DS1-6 is set to on, then no bleep will be produced.

TO SELECT: BEL

Example command:

```
LPRINT CHR$(7)
```

Delete

This code removes the last character from the printer's buffer.

TO SELECT: DEL

Example command:

```
LPRINT CHR$(127)
```

Note that the above code will not delete any *control codes* in the buffer.

Uni-directional printing

By default, the LQ3500 prints in both directions - left to right and right to left. This code selects printing from left to right only.

TO SELECT: ESC U SOH

Instead of NUL and SOH, "`0`" or "`1`" can be used.

Example command:

```
LPRINT CHR$(27) + "U" + CHR$(1)
```

TO CANCEL: ESC U NUL

Example command:

```
LPRINT CHR$(27) + "U" + CHR$(0)
```

NOTE: When printing-out graphics characters or boxes whose vertical lines are to be continuous down the page (or when using ready-made graphics characters from IBM character sets #1 and #2), you should additionally select uni-directional printing. This will afford more accurate alignment of the vertical lines.

Left to right printing

This code prints the current line only from left to right.

TO SELECT: ESC <

Example command:

```
LPRINT CHR$(27) + "<"  
LPRINT "This will always print left to right"
```

Half speed

This code halves the speed of the print head's movement.

TO SELECT: ESC s SOH

Instead of NUL and SOH, "0" or "1" can be used.

Example command:

```
LPRINT CHR$(27) + "s" + CHR$(1)
```

TO CANCEL: ESC s NUL

Example command:

```
LPRINT CHR$(27) + "s" + CHR$(0)
```

Character table selection

The setting of DIP switch DS2-5 selects the default character set to be used when the printer is switched on. The following code allow the DIP switch setting to be overridden or enhanced by software.

TO SELECT: ESC t <n>

Where <n> can take the following values:

<n>	Character Set
0	Epson
1	IBM #1
2	IBM #2

Example command:

```
LPRINT CHR$(27) + "t" + CHR$(1)
```

The following example program uses the above code and selects LQ typeface in order to print-out characters from table 4.2 (see appendix 2).

```
10 LPRINT CHR$(27) + "t" + CHR$(2)
20 LPRINT CHR$(27) + "x" + CHR$(1)
30 FOR c=3 TO 6
40     LPRINT CHR$(c)
50 NEXT
```

```
RUN
```


Selecting IBM character sets

When in IBM mode, either of the IBM character sets can be selected with the following commands:

IBM character set #2

TO SELECT: ESC 6

Example command:

```
LPRINT CHR$(27) + "6"
```

IBM character set #1

TO SELECT: ESC 7

Example command:

```
LPRINT CHR$(27) + "7"
```

For details of character sets, see appendix 2.

International character set selection

The setting of DIP switches DS1-1, DS1-2 and DS1-3 (described in chapter 2) facilitates hardware selection of the international characters to be used when the printer is switched on. The following code allows the DIP switch settings to be overridden by software.

TO SELECT: ESC R <n>

....where <n> is in the range 0 to 10 for the following countries:

<n>	COUNTRY
0	USA
1	France I
2	Germany
3	UK I
4	Denmark I
5	Sweden
6	Italy
7	Spain
8	Japan
9	Norway
10	Denmark II

Example command:

```
LPRINT CHR$(27) + "R" + CHR$(3)
```

The following example program prints-out (for each of the above countries - 0 to 10) the character numbers listed in line 90.

```

10 FOR n=0 TO 10
20   RESTORE 90
30   LPRINT CHR$(27) + "R" + CHR$(n)
40   FOR c=1 TO 12
50     READ d
60     LPRINT SPC(4); CHR$(d);
70   NEXT
80 NEXT
90 DATA 35,36,64,91,92,93,94,96,123,124,125,126

```

RUN

IMPORTANT: To print international characters, IBM character set #1 or #2 must NOT be selected - ie. DIP switch DS2-5 must be off.

Print mode selection

This code enables you to select a combination of some of the more commonly used typefaces and options, namely: standard, mini, condensed, bold, double strike and double width.

TO SELECT: ESC ! <n>

Example command:

```
LPRINT CHR$(27) + "!" + CHR$(17)
```

....where <n> is a bit-significant number selecting the typeface and option as follows:

Standard typeface	- set the value of <n> to 0
Mini typeface	- add 1 to the value of <n>
Proportional option	- add 2 to the value of <n>
Condensed typeface	- add 4 to the value of <n>
Bold option	- add 8 to the value of <n>
Double strike option	- add 16 to the value of <n>
Double width option	- add 32 to the value of <n>
Italics option	- add 64 to the value of <n>
Underline	- add 128 to the value of <n>

Thus, setting the value of <n> to 17 (as in the above example command) selects mini typeface (add 1) with the double strike option (add 16), ie. $1 + 16 = 17$.

Remember that illegal combinations of typeface and option must be avoided when choosing the value of <n>. See the notes at the end of chapter 3.

NOTE: Take care when setting <n> to 9. Some BASICs change this to a string of spaces. Check your BASIC manual.

TO CANCEL: ESC ! NUL

Example command:

```
LPRINT CHR$(27) + "!" + CHR$(0)
```

User defined characters

The LQ3500 has the ability to print user defined characters. The following section outlines how to go about defining (downloading) a character.

There are three main stages to go through before a downloaded character appears on the paper:

-etc..... <d(n)
.....etc..... <d(n)
.....etc..... <d(n)
.....etc..... <d(n)
.....etc..... <d(n)

.....etc.... <d(n)
.....etc.... <d(n)
.....etc.... <d(n)
.....etc.... <d(n)
.....etc.... <d(n)

27, though some

members which are to
last. If <first> is less
dy, <right> <dl>

put to the left and
ng, then use nulls.

vertical line of dots.

```

      <d1> <d4> <d7> <d10> .....
(MSB) bit 7
      bit 6
      bit 5
      bit 4
      bit 3
      bit 2
      bit 1
(LSB) bit 0

      <d2> <d5> <d8> <d11> .....
(MSB) bit 7
      bit 6
      bit 5
      bit 4
      bit 3
      bit 2
      bit 1
(LSB) bit 0

      <d3> <d6> <d9> <d12> .....
(MSB) bit 7
      bit 6
      bit 5
      bit 4
      bit 3
      bit 2
      bit 1
(LSB) bit 0

```

Note that (n) must, therefore, be a multiple of three.

The character is defined from left to right with the highest bit printed at the top of the character. Note that the printer is incapable of printing contiguous dots on the same horizontal line, and every other horizontally adjacent bit will be ignored if this is attempted. This will become clearer if you study the example at the end of this section.

Characters are defined in the mode that the printer is in when you download a character.

2. Download character set selection

TO SELECT: ESC % SOH

Example command:

```
LPRINT CHR$(27) + "%" + CHR$(1)
```

The above code selects the download character set for use.

TO CANCEL: ESC % NUL

Example command:

```
LPRINT CHR$(27) + "%" + CHR$(0)
```

The above code de-selects the download character set and re-selects the internal character set.

For your reference, the following code copies the internal character set into the download set. This is a good way of wiping out the redefined set for a clean start:

TO SELECT: ESC : NUL NUL NUL

Example command:

```
LPRINT CHR$(27) + ":" + CHR$(0) + CHR$(0) + CHR$(0)
```

Note that when the printer is switched on, the download set is undefined.

3. Printing of the character

Simply send the download character to the printer.

Example program:

The following program uses the above sequence of operations to create a user defined character (a square box). The box is three characters-worth of data deep, ie. the left hand side requires three characters to be sent for it. The first set of three characters are the left hand side, the next nine groups of three are the centre (top and bottom sides), and the last group of three are the right hand side.

(NOTE: If you intend to type in this program, you need not bother including the REM statements.)

```
10 WIDTH LPRINT 255
20 REM download character set selection
30 LPRINT CHR$(27) + "&" + CHR$(0) + CHR$(126) + CHR$(126)
  + CHR$(0) + CHR$(11) + CHR$(2);
40 :
50 REM this is the left side of the box
60 LPRINT CHR$(255) + CHR$(255) + CHR$(255);
70 :
80 REM top and bottom of box
90 FOR i=1 TO 9
100 LPRINT CHR$(128) + CHR$(0) + CHR$(1);
110 NEXT i
120 :
```

program continued...


```

130 REM right side of box
140 LPRINT CHR$(255) + CHR$(255) + CHR$(255);
150 :
160 LPRINT CHR$(27) + "%" + CHR$(1): REM enable downloaded set
170 :
180 REM print-out the finished download character (40 times)
190 FOR p=1 TO 40
200 LPRINT CHR$(126);
210 NEXT
220 LPRINT

```

RUN

The program will produce the following results:



NOTE: For this example program to work, DIP switch DS2-4 must be set to the on position. (See chapter 7 for a table of all DIP switch functions.)

REMEMBER: Always switch the printer *off* before adjusting the DIP switches.

Hexadecimal dump

The LQ3500 has the ability to automatically print-out, in hexadecimal format, the value of each byte of data it receives. To select this mode, the printer must be switched on while the LF and FF buttons are held down together.

To illustrate this facility, load a piece of paper into the printer, switch the printer *off*, then hold down the LF and FF buttons together while switching the printer *on* again. The printer is now in the hex dump mode.

Start up BASIC on your PC and type:

```
10 REM abcdef123
```

Now list this one-line program to the printer by typing:

```
LLIST
```

You should see the following hex codes printed out:

```

31 30 20 52 45 40 20 61 62 63 64 65 66 31 32 33      10 REM abcdef123
00 0A

```

....which are the ASCII codes (in hex) for the characters in the program you listed (including the line number and spaces) plus carriage return and line feed (0D and 0A).

At the right-hand side of the hex codes, the characters are printed in ASCII (as faithfully as possible).

In the hex dump mode, there will usually be some characters left in the buffer after printing. Therefore, when the printer has stopped, always set it off line to flush the buffer.

To cancel the hex dump mode, simply switch the printer *off*.

...which are the ASCII codes (in hex) for the characters in the program you listed
(including the line number and spaces) plus carriage return and line feed (0D and 0A).
At the right-hand side of the hex codes, the characters are printed in ASCII (as
faithfully as possible).

In the hex dump mode, there will usually be some characters fed in the buffer after
printing. Therefore, when the printer has stopped, always set it off one to flush the
buffer.

To cancel the hex dump mode, simply switch the printer off.

Chapter 7

For your reference....

Subjects covered in this chapter:

- Technical Specification
- Printer socket
- Interface
- DIP switch functions
- Signal timing
- If your printer stops printing

Technical Specification

Print system:

Impact dot-matrix

Print speed:

Standard typeface	12 CPI / 160 CPS 10 CPI / 135 CPS
Condensed	12 CPI / 74 CPS 10 CPI / 62 CPS
LQ	12 CPI / 54 CPS 10 CPI / 45 CPS

Printing characteristics:

- 24-pin print head, capable of 8-pin emulation
- 96 characters ASCII and italics
- International character sets
- Graphics character set

Normal character size:

2.1 (width) x 2.55 (height) mm

Print sizes:

- Standard (Pica) - 10 CPI / 80 CPL
- Mini (Elite) - 12 CPI / 96 CPL
- Condensed - 17 CPI / 137 CPL
- Double width standard - 5 CPI / 40 CPL
- Double width mini - 6 CPI / 48 CPL
- Double width condensed - 8.5 CPI / 68 CPL

Number of columns:

- 80 (standard)
- 40 (double width)
- 132 (condensed)
- 66 (double width condensed)

Line feed rates:

- 1/6 inch
- 1/8 inch
- n/180 inch programmable
- n/60 inch programmable

Line feed speed:

- 200 mS (1/6 inch)

Paper type:

- 4.5 to 10 inches fan-fold (tractor feed)
- 4 to 9.5 inches cut sheet or roll paper (friction feed)

Number of copies:

- 1 sheets (incl. original)
- 40 g/m² pressure-sensitive paper train

Interface:

- Parallel (Centronics compatible)
- Serial (RS232C)

Buffer Size:

- 7K bytes.

Mains supply:

- 220-240 Volt AC 50 Hz

Dimensions:

- 17.5 (width) x 16 (depth) x 4 (height) inches
- (440 x 400 x 100 mm)


Weight:

- 5.9 kg
-

Parallel Printer socket

Parallel Interface

PIN	DESIGNATION	I/O	DESCRIPTION
1	STROBE	IN	Testing pin low enables receiving of DATA 0 to DATA 7. Minimum necessary pulse width is 0.5µs.
2	DATA 0 (LSB)	IN	8-bit data signal. Testing pin high or low
3	DATA 1	IN	
4	DATA 2	IN	
5	DATA 3	IN	
6	DATA 4	IN	
7	DATA 5	IN	
8	DATA 6	IN	
9	DATA 7 (MSB)	IN	
10	ACKNOWLEDGE	OUT	Active-low output pulse generated when data entry and processing are completed. After this signal, subsequent data will be accepted. This signal is also generated when changing from off line
11	BUSY	OUT	Output high under any of the following conditions: a. Going off line b. Paper loaded or printing operation. c. When a control code is received.
12	PE	OUT	Output high when paper is out. (When on line, paper out is sensed after executing the paper feed command. When off line, paper out is always sensed.)
13	SELECT	OUT	On line and off line correspond to high and low respectively. When off line, DATA 0 to DATA 7 cannot be received.
14	AFD	-	Testing pin low generates line feed.
15	NC	-	
16	OV	-	
17	CHASSIS GND	-	
18	+5V	-	+5V (500mA max) power supply output.
19	GND	-	Signal ground.
20	GND	-	Signal ground.
21	GND	-	Signal ground.

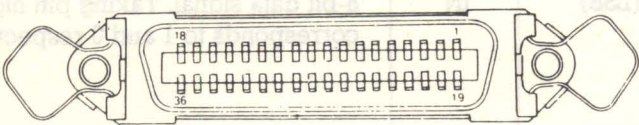

Rear view of printer

Parallel Interface

PIN	DESIGNATION	I/O	DESCRIPTION
1	<u>STROBE</u>	IN	Taking pin low enables receiving of DATA 0 to DATA 7. Minimum necessary pulse width is $0.5\mu\text{S}$.
2	DATA 0 (LSB)	IN	8-bit data signal. Taking pin high or low corresponds to 1 and 0 respectively.
3	DATA 1		
4	DATA 2		
5	DATA 3		
6	DATA 4		
7	DATA 5		
8	DATA 6		
9	DATA 7 (MSB)		
10	<u>ACKNOWLEDGE</u>	OUT	Active low output pulse generated when data entry and processing are completed. After this signal, subsequent data will be accepted. This signal is also generated when changing from off line to on line.
11	BUSY	OUT	Output high under any of the following conditions: a. Going off line. b. Paper feed or printing operation. c. When a control code is received.
12	PE	OUT	Output high when paper is out. (When on line, paper out is sensed after executing the paper feed command. When off line, paper out is always sensed.)
13	SELECT	OUT	On line and off line correspond to high and low respectively. When off line, DATA 0 to DATA 7 cannot be received.
14	<u>AFD</u>		Taking pin low generates line feed.
15	NC		
16	0V		
17	CHASSIS GND		
18	+5V		
19	GND		
20	GND		
21	GND		
			+5V (50mA max) power supply output.
			Signal ground.
			Signal ground.
			Signal ground.

PIN	DESIGNATION	I/O	DESCRIPTION
22	GND		Signal ground.
23	GND		Signal ground.
24	GND		Signal ground.
24	GND		Signal ground.
26	GND		Signal ground.
27	GND		Signal ground.
28	GND		Signal ground.
29	GND		Signal ground.
30	GND		Signal ground.
31	INPUT PRIME	IN	Taking pin low initialises printer. Minimum necessary pulse width is 100 μ S.
32	FAULT	OUT	Output low when off line.
33	GND		
34	NC		
35	+5V	OUT	
36	SLCT IN	IN	Taking pin low or high sets printer on line or off line respectively (when the printer is not in error condition).


DIP switch functions

Chapter 2 described how to adjust DIP switches DS1-7, to select the default character set and also how to adjust DS1-1, DS1-2, DS1-3 to select the required international characters. The following table indicates the functions of the remaining DIP switches:

SWITCH	FUNCTION	OFF	ON
DS1-1	International characters	See chapter 2	See chapter 2
DS1-2	International characters	See chapter 2	See chapter 2
DS1-3	International characters	See chapter 2	See chapter 2
DS1-4	Page length	11 inch	12 inch
DS1-5	Default skip perforation	Disable	Enable
DS1-6	Alarm bleeper	Enable	Disable
DS1-7	Print mode	Standard	LQ
DS1-8	SLCT IN signal	Not sent	Automatically sent
DS2-1	Paper out sensor	Enable	Disable
DS2-2	CR function	CR only	CR and LF
DS2-3	Zero character	Unslashed	Slashed
DS2-4	Reserved		
DS2-5	Character set	Epson	IBM
DS2-6	Unused		
DS2-7	Auto loading	Enable	Disable
DS2-8	Reserved		


REMEMBER: Always switch the printer *off* before adjusting the DIP switches.

Signal timing

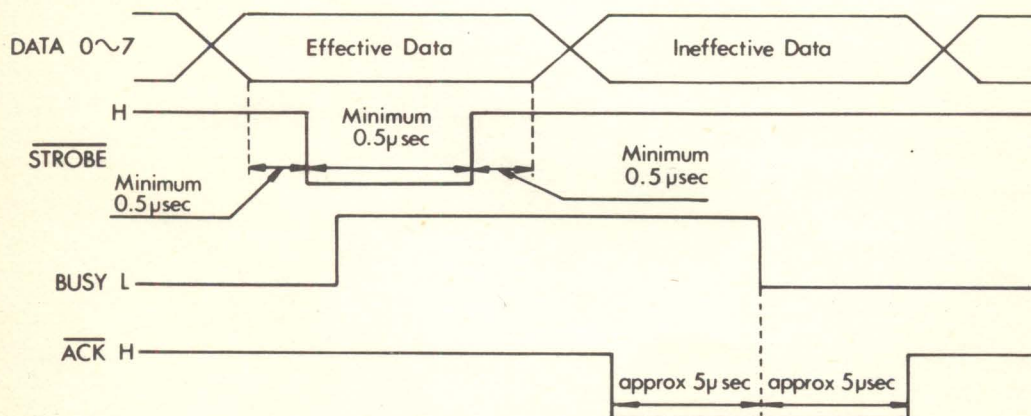

DATA input waveform

Serial Printer Port

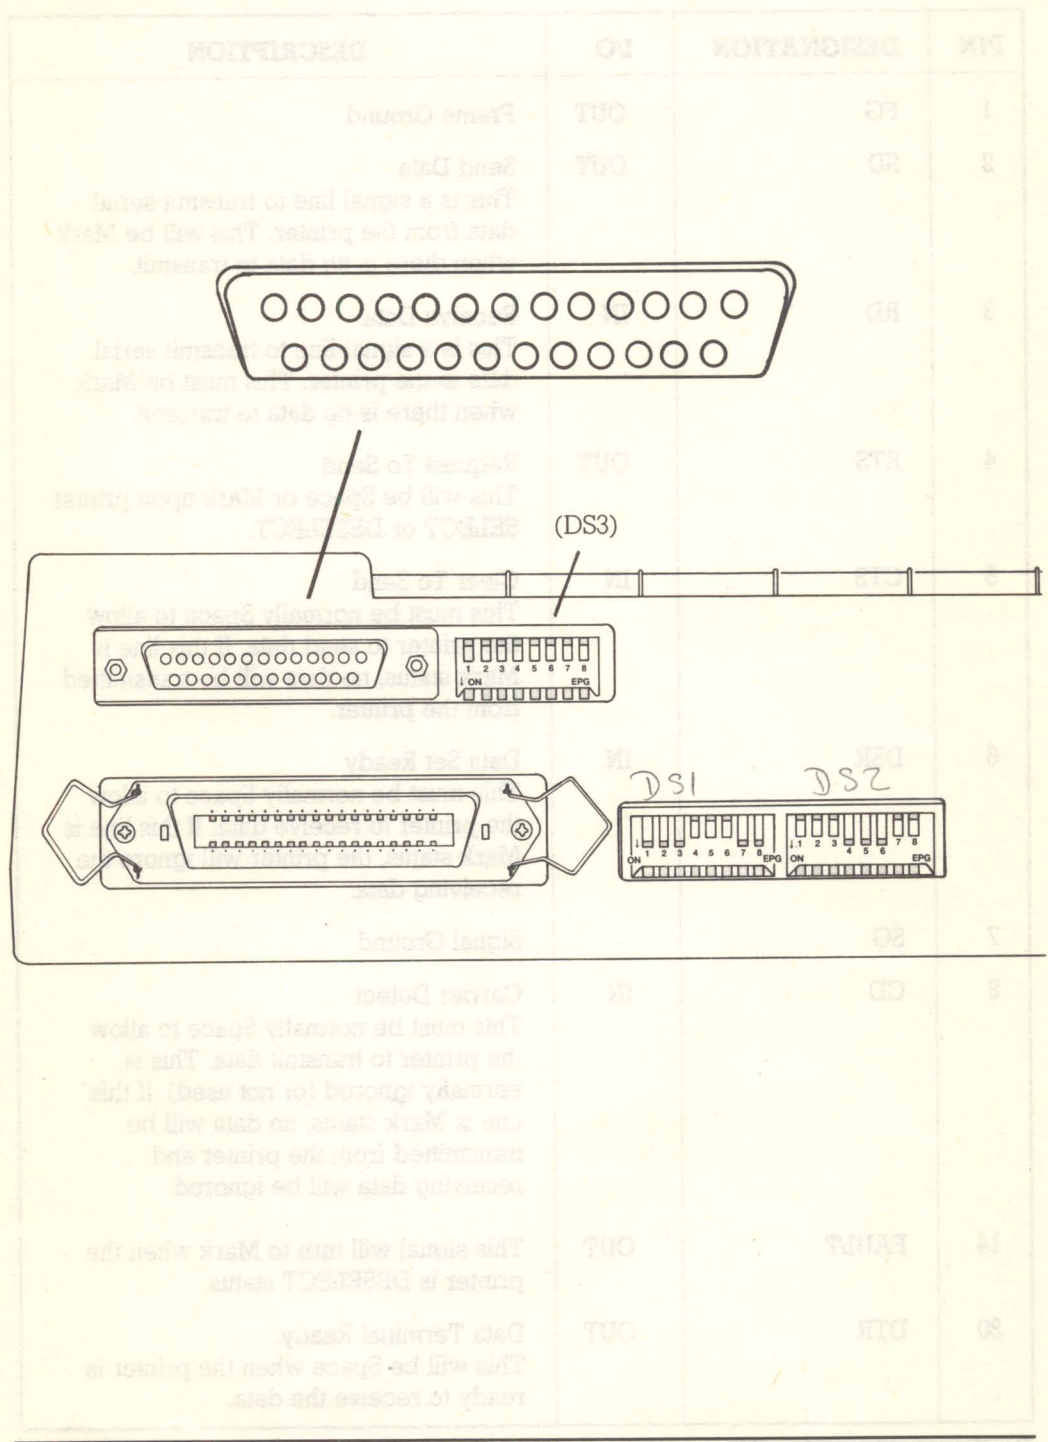

Serial Interface

PIN	DESIGNATION	I/O	DESCRIPTION
1	FG	OUT	Frame Ground
2	SD	OUT	Send Data This is a signal line to transmit serial data from the printer. This will be Mark when there is no data to transmit.
3	RD	IN	Receive Data This is a signal line to transmit serial data to the printer. This must be Mark when there is no data to transmit.
4	RTS	OUT	Request To Send This will be Space or Mark upon printer SELECT or DESELECT.
5	CTS	IN	Clear To Send This must be normally Space to allow the printer to send data. If this line is Mark status, no data will be transmitted from the printer.
6	DSR	IN	Data Set Ready This must be normally Space to allow the printer to receive data. If this line is Mark status, the printer will ignore the receiving data.
7	SG	--	Signal Ground
8	CD	IN	Carrier Detect This must be normally Space to allow the printer to transmit data. This is normally ignored (or not used). If this line is Mark status, no data will be transmitted from the printer and receiving data will be ignored.
14	FAULT	OUT	This signal will turn to Mark when the printer is DESELECT status.
20	DTR	OUT	Data Terminal Ready. This will be Space when the printer is ready to receive the data.

Serial Port DIP switch functions

BAUD RATE SELECTION (serial I/F only)

BAUD RATE	DS3-1	DS3-2	DS3-3	
9600 bps	OFF	OFF	OFF	*
4800 bps	OFF	OFF	ON	
2400 bps	OFF	ON	OFF	
1200 bps	OFF	ON	ON	
600 bps	ON	OFF	OFF	
300 bps	ON	OFF	ON	
200 bps	ON	ON	OFF	
150 bps	ON	ON	ON	

PARITY SELECTION

PARITY	DS3-4	DS3-5	
NON PARITY	OFF	OFF	*
NON PARITY	OFF	ON	
ODD PARITY	ON	OFF	
EVEN PARITY	ON	ON	

DATA LENGTH SELECTION

DATA LENGTH	DS3-6	
8 bit	OFF	*
7 bit	ON	

I/F AND PROTOCOL SELECTION

I/F & PROTOCOL	DS3-7	DS3-8	
Parallel	OFF	OFF	*
Serial (RDY/BSY)	OFF	ON	
Serial (Xon/Xoff)	ON	OFF	
Serial (ETX/ACK)	ON	ON	

* Default setting

If your printer stops printing

Despite everybody's best efforts, even the finest machinery breaks down sometimes. Should your LQ3500 detect that something is amiss, it will let you know with a combination of flashing lights and bleeping noises. The paper out alarm is a good example of this, and also demonstrates that 'failures' are sometimes recoverable and not always catastrophic.

When the paper runs out, the PAPER OUT light comes on and the ON LINE light goes out. This will not happen if you have set DS2-1 to ignore paper out.

The remedy is, of course, to feed it some paper and press the ON LINE button.

Should the motor in the printer not feed the paper through correctly, the MODE light will flash, and the printer will make groups of five beeps. If this fault persists, first make sure there are no obstructions in the printer (pens, sticky labels, paperclips, chewing gum, etc.). If the cause of the fault still cannot be detected, then return the printer to your dealer.

During very long printing sessions, or while printing exceptionally black graphics, the print head may get rather warm. To prevent damage to the head, the printer stops for a while to cool off if the head temperature exceeds 130°C. While it is cooling off, the ON LINE light will flash.

Should an internal memory error occur inside the printer, the printer emits single beeps and flashes the ON LINE and either the MODE or PAPER OUT lights. If this error persists, return the printer to your dealer.

If your printer stops printing

Despite everybody's best efforts, even the finest machinery breaks down sometimes. Should your LQ3200 detect that something is amiss, it will let you know with a combination of flashing lights and beeping noises. The paper out alarm is a good example of this, and also demonstrates that failures are sometimes testable and not always catastrophic.

When the paper runs out, the PAPER OUT light comes on and the ON LINE light goes out. This will not happen if you have set D32-1 to ignore paper out.

The remedy is, of course, to feed it some paper and press the ON LINE button.

Should the motor in the printer not feed the paper through correctly, the MODE light will flash, and the printer will make groups of five beeps. If this fault persists, first make sure there are no obstructions in the printer (pens, sticky labels, paperclips, chewing gum, etc.). If the cause of the fault still cannot be detected, then return the printer to your dealer.

During very long printing sessions, or while printing exceptionally black graphics, the print head may get rather warm. To prevent damage to the head, the printer stops for a while to cool off if the head temperature exceeds 130°C. While it is cooling off, the ON LINE light will flash.

Should an internal memory error occur inside the printer, the printer emits single beeps and flashes the ON LINE and either the MODE or PAPER OUT lights. If this error persists, return the printer to your dealer.

Appendix 1

Table of control codes

CODE	DECIMAL	HEX	FUNCTION
BEL	7	&07	Sound bleeper
BS	8	&08	Back space
HT	9	&09	Horizontal tab jump
LF	10	&0A	Line feed
VT	11	&0B	Vertical tab jump
FF	12	&0C	Form feed
CR	13	&0D	Carriage return
SO	14	&0E	Select one-line double width
SI	15	&0F	Select condensed
DC1	17	&11	Device control 1
DC2	18	&12	Cancel condensed
DC3	19	&13	Device control 3
DC4	20	&14	Cancel double width
CAN	24	&18	Clear print buffer
DEL	127	&7F	Delete last character
ESC SO	27 14	&1B &0E	Select on-line double width
ESC SI	27 15	&1B &0F	Select condensed
ESC EM <parameter>	27 25 <n>	&1B &19 <n>	ASF control (not supported)
ESC SPC <parameter>	27 32 <n>	&1B &20 <n>	Select character space
ESC ! <parameter>	27 33 <n>	&1B &21 <n>	Select print mode
ESC #	27 35	&1B &23	Accept eighth bit
ESC \$ <parameters>	27 36 <n>..	&1B &24 <n>..	Absolute print position
ESC % <parameters>	27 37 <n>..	&1B &25 <n>..	Select internal or download character set
ESC & NUL <parameters>	27 38 0 <n>..	&1B &26 &00 <n>..	Define download character
ESC * <parameters>	27 42 <n>..	&1B &2A <n>..	Select bit image graphics
ESC - <parameter>	27 45 <n>	&1B &2D <n>	Select or cancel underline
ESC / <parameter>	27 47 <n>	&1B &2F <n>	Select tab channel
ESC Ø	27 48	&1B &30	Select 1/8 inch paper feed
ESC 2	27 50	&1B &32	Select 1/6 inch paper feed

CODE	DECIMAL	HEX	FUNCTION
ESC 3 «parameter»	27 51 «n»	&1B &33 «n»	Select variable «n»/180 inch paper feed
ESC 4	27 52	&1B &34	Select italics
ESC 5	27 53	&1B &35	Cancel italics
ESC 6	27 54	&1B &36	Select IBM #2 (if in IBM mode)
ESC 7	27 55	&1B &37	Select IBM #1 (if in IBM mode)
ESC 8	27 56	&1B &38	Disable paper out detection
ESC 9	27 57	&1B &39	Enable paper out detection
ESC : NUL «parameters»	27 58 0 «n»..	&1B &3A &00 «n»..	Copy internal character set into download set
ESC <	27 60	&1B &3C	Left to right printing
ESC =	27 61	&1B &3D	Unset eighth bit to 0
ESC >	27 62	&1B &3E	Set eighth bit to 1
ESC ? «parameters»	27 63 «n»..	&1B &3F «n»..	Select/change bit image mode
ESC @	27 64	&1B &40	Reset printer
ESC A «parameter»	27 65 «n»	&1B &41 «n»	Select variable «n»/60 inch paper feed
ESC B «parameters» NUL	27 66 «n».. 0	&1B &42 «n».. &00	Set vertical tabs
ESC C «parameter»	27 67 «n»	&1B &43 «n»	Set page length (by lines)
ESC C NUL «parameter»	27 67 0 «n»	&1B &43 &00 «n»	Set page length (by inches)
ESC D «parameters» NUL	27 68 «n».. 0	&1B &44 «n».. &00	Set horizontal tabs
ESC E	27 69	&1B &45	Select bold
ESC F	27 70	&1B &46	Cancel bold
ESC G	27 71	&1B &47	Select double strike
ESC H	27 72	&1B &48	Cancel double strike
ESC J «parameter»	27 74 «n»	&1B &4A «n»	Select variable «n»/180 inch one-shot forward
ESC K «parameters»	27 75 «n»..	&1B &4B «n»..	Select single density graphics
ESC L «parameters»	27 76 «n»..	&1B &4C «n»..	Select double density graphics

CODE	DECIMAL	HEX	FUNCTION
ESC M	27 77	&1B &4D	Select mini (Elite) pitch
ESC N <parameters>	27 78 <n>..	&1B &4E <n>..	Select skip perforation
ESC O	27 79	&1B &4F	Cancel skip perforation
ESC P	27 80	&1B &50	Cancel mini (set Pica)
ESC Q <parameter>	27 81 <n>	&1B &51 <n>	Set right margin
ESC R <parameter>	27 82 <n>	&1B &52 <n>	Select international character set
ESC S <parameter>	27 83 <n>	&1B &53 <n>	Select subscript or superscript
ESC T	27 84	&1B &54	Cancel subscript and superscript
ESC U <parameter>	27 85 <n>	&1B &55 <n>	Select or cancel uni-directional printing
ESC V <parameters>	27 86 <n>..	&1B &56 <n>..	Repeating print
ESC W <parameter>	27 87 <n>	&1B &57 <n>	Select or cancel double-width
ESC Y <parameters>	27 89 <n>..	&1B &59 <n>..	Select double speed double density graphics
ESC Z <parameters>	27 90 <n>..	&1B &5A <n>..	Select quadruple density graphics
ESC \ <parameters>	27 92 <n>..	&1B &5C <n>..	Set relative position
ESC a <parameter>	27 97 <n>	&1B &61 <n>	Set justification type
ESC b <parameters> NUL	27 98 <n>.. 0	&1B &62 <n>.. &00	Set tabs in tab channel
ESC j <parameter> feed	27 106 <n>	&1B &6A <n>	Select variable <n>/180 inch one-shot reverse
ESC k <parameter>	27 107 <n>	&1B &6B <n>	Select type style (not supported)
ESC l <parameter>	27 108 <n>	&1B &6C <n>	Set left margin
ESC p <parameter>	27 112 <n>	&1B &70 <n>	Select or cancel proportional
ESC s <parameter>	27 115 <n>	&1B &73 <n>	Select or cancel half speed printing
ESC t <parameter>	27 116 <n>	&1B &74 <n>	Select Epson/IBM character set
ESC x <parameter>	27 120 <n>	&1B &78 <n>	Select or cancel LQ

CODE	DECIMAL	HEX	FUNCTION
ESC x-parameter	37 130 m	41B 41 5 m	Select or cancel NO
ESC 1-parameter	37 116 m	41B 41 4 m	Select EBCDIC character and
ESC 2-parameter	37 110 m	41B 41 3 m	Select or cancel half speed printing
ESC 3-parameter	37 112 m	41B 41 2 m	Select or cancel proportional
ESC 4-parameter	37 112 m	41B 41 2 m	Select or cancel
ESC 1-parameter	37 106 m	41B 40C m	Set left margin
ESC 1-parameter	37 107 m	41B 40B m	Select type style (not supported)
ESC 1-parameter	37 100 m	41B 40A m	Select variable and 180 inch non-dot reverse
ESC 1-parameter	37 98 m	41B 40 2 m	Set tabs in tab channel
ESC 4-parameter	37 97 m	41B 40 1 m	Set justification type
ESC 1-parameter	37 93 m	41B 3FC m	Set relative position
ESC 1-parameter	37 90 m	41B 3FA m	Select graphics device
ESC 1-parameter	37 89 m	41B 40B m	Select double speed double density graphics
ESC 4-parameter	37 87 m	41B 40 2 m	Select or cancel double width
ESC 4-parameter	37 87 m	41B 40 2 m	Select or cancel
ESC 4-parameter	37 86 m	41B 40B m	Page-end print
ESC 4-parameter	37 85 m	41B 40B m	Select or cancel
ESC 4-parameter	37 84 m	41B 40A m	Cancel subscript and superscript
ESC 2-parameter	37 83 m	41B 40 2 m	Select subscript or superscript
ESC 4-parameter	37 82 m	41B 40B m	Select internal
ESC 4-parameter	37 81 m	41B 40 1 m	Set right margin
ESC 4-parameter	37 80 m	41B 40B m	Cancel name (not PPS)
ESC 4-parameter	37 79 m	41B 40 2 m	Cancel left justification
ESC 4-parameter	37 78 m	41B 40 2 m	Select left justification
ESC 4-parameter	37 77 m	41B 40B m	Select tab (line) print

Appendix 2

Character tables

NOTE: The following character tables may be selected using DIP switch DS2-5, DS1-7, and ESC 6 or 7, or alternatively, by the control code ESC t <n> (see chapter 6 under the section entitled 'Character table selection').

Table 1 (DS1-7 off, DS2-5 off)

Epson - standard

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F

32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F

48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F

64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&40	&41	&42	&43	&44	&45	&46	&47	&48	&49	&4A	&4B	&4C	&4D	&4E	&4F

80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&50	&51	&52	&53	&54	&55	&56	&57	&58	&59	&5A	&5B	&5C	&5D	&5E	&5F

beginning...

....continued

Table 1 continued....

96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&60	&61	&62	&63	&64	&65	&66	&67	&68	&69	&6A	&6B	&6C	&6D	&6E	&6F

112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
p	q	r	s	t	u	v	w	x	y	z	{		}	~	
&70	&71	&72	&73	&74	&75	&76	&77	&78	&79	&7A	&7B	&7C	&7D	&7E	&7F

128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
&80	&81	&82	&83	&84	&85	&86	&87	&88	&89	&8A	&8B	&8C	&8D	&8E	&8F

144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
&90	&91	&92	&93	&94	&95	&96	&97	&98	&99	&9A	&9B	&9C	&9D	&9E	&9F

160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF

176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
&B0	&B1	&B2	&B3	&B4	&B5	&B6	&B7	&B8	&B9	&BA	&BB	&BC	&BD	&BE	&BF

192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&C0	&C1	&C2	&C3	&C4	&C5	&C6	&C7	&C8	&C9	&CA	&CB	&CC	&CD	&CE	&CF

208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

Table 1 continued....

208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&E0	&E1	&E2	&E3	&E4	&E5	&E6	&E7	&E8	&E9	&EA	&EB	&EC	&ED	&EE	&EF

240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
p	q	r	s	t	u	v	w	x	y	z	{		}	~	
&F0	&F1	&F2	&F3	&F4	&F5	&F6	&F7	&F8	&F9	&FA	&FB	&FC	&FD	&FE	&FF

260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275
0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F

280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295
G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F

300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315
W	X	Y	Z	[	\	]	^	_	`	a	b	c	d	e	f
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F

320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335
g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F

Table 2 (DS1-7 on, DS2-5 off)
Epson - LQ

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F

32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F

48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F

64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&40	&41	&42	&43	&44	&45	&46	&47	&48	&49	&4A	&4B	&4C	&4D	&4E	&4F

80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&50	&51	&52	&53	&54	&55	&56	&57	&58	&59	&5A	&5B	&5C	&5D	&5E	&5F

96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&60	&61	&62	&63	&64	&65	&66	&67	&68	&69	&6A	&6B	&6C	&6D	&6E	&6F

Table 2 continued....

112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
p	q	r	s	t	u	v	w	x	y	z	{		}	~	
&70	&71	&72	&73	&74	&75	&76	&77	&78	&79	&7A	&7B	&7C	&7D	&7E	&7F

128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
&80	&81	&82	&83	&84	&85	&86	&87	&88	&89	&8A	&8B	&8C	&8D	&8E	&8F

144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
&90	&91	&92	&93	&94	&95	&96	&97	&98	&99	&9A	&9B	&9C	&9D	&9E	&9F

160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF

176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
&B0	&B1	&B2	&B3	&B4	&B5	&B6	&B7	&B8	&B9	&BA	&BB	&BC	&BD	&BE	&BF

192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&C0	&C1	&C2	&C3	&C4	&C5	&C6	&C7	&C8	&C9	&CA	&CB	&CC	&CD	&CE	&CF

208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

....continued

Table 2 continued....

224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&E0	&E1	&E2	&E3	&E4	&E5	&E6	&E7	&E8	&E9	&EA	&EB	&EC	&ED	&EE	&EF

240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
p	q	r	s	t	u	v	w	x	y	z	{		}	~	
&F0	&F1	&F2	&F3	&F4	&F5	&F6	&F7	&F8	&F9	&FA	&FB	&FC	&FD	&FE	&FF

256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271
&100	&101	&102	&103	&104	&105	&106	&107	&108	&109	&10A	&10B	&10C	&10D	&10E	&10F

272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287
&110	&111	&112	&113	&114	&115	&116	&117	&118	&119	&11A	&11B	&11C	&11D	&11E	&11F

288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303
&120	&121	&122	&123	&124	&125	&126	&127	&128	&129	&12A	&12B	&12C	&12D	&12E	&12F

304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319
&130	&131	&132	&133	&134	&135	&136	&137	&138	&139	&13A	&13B	&13C	&13D	&13E	&13F

320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335
&140	&141	&142	&143	&144	&145	&146	&147	&148	&149	&14A	&14B	&14C	&14D	&14E	&14F

continued....

Table 3.1 (DS1-7 off, DS2-5 on)
IBM character set #1 - standard

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F
32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F
48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F
64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
&40	&41	&42	&43	&44	&45	&46	&47	&48	&49	&4A	&4B	&4C	&4D	&4E	&4F
80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
&50	&51	&52	&53	&54	&55	&56	&57	&58	&59	&5A	&5B	&5C	&5D	&5E	&5F
96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
&60	&61	&62	&63	&64	&65	&66	&67	&68	&69	&6A	&6B	&6C	&6D	&6E	&6F

....continued

Table 3.1 (cont.)
 IBM character set 81 - standard

Table 3.1 continued....

112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
p	q	r	s	t	u	v	w	x	y	z	{		}	~	-
&70	&71	&72	&73	&74	&75	&76	&77	&78	&79	&7A	&7B	&7C	&7D	&7E	&7F
128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
&80	&81	&82	&83	&84	&85	&86	&87	&88	&89	&8A	&8B	&8C	&8D	&8E	&8F
144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
&90	&91	&92	&93	&94	&95	&96	&97	&98	&99	&9A	&9B	&9C	&9D	&9E	&9F
160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
ā	ī	ō	ū	ñ	Ñ	ǣ	œ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF
176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘	⌘
&B0	&B1	&B2	&B3	&B4	&B5	&B6	&B7	&B8	&B9	&BA	&BB	&BC	&BD	&BE	&BF
192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&C0	&C1	&C2	&C3	&C4	&C5	&C6	&C7	&C8	&C9	&CA	&CB	&CC	&CD	&CE	&CF
208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

Table 3.1 continued....

224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
α	β	Γ	π	Σ	σ	μ	τ	Φ	Θ	Ω	δ	ω	ø	€	Π
&E0	&E1	&E2	&E3	&E4	&E5	&E6	&E7	&E8	&E9	&EA	&EB	&EC	&ED	&EE	&EF

240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
≡	±	≥	≤	∫	∫	÷	≈	°	•	-	√	∞	²	■	
&F0	&F1	&F2	&F3	&F4	&F5	&F6	&F7	&F8	&F9	&FA	&FB	&FC	&FD	&FE	&FF

256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271
&100	&101	&102	&103	&104	&105	&106	&107	&108	&109	&10A	&10B	&10C	&10D	&10E	&10F

272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287
&110	&111	&112	&113	&114	&115	&116	&117	&118	&119	&11A	&11B	&11C	&11D	&11E	&11F

288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303
&120	&121	&122	&123	&124	&125	&126	&127	&128	&129	&12A	&12B	&12C	&12D	&12E	&12F

304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319
&130	&131	&132	&133	&134	&135	&136	&137	&138	&139	&13A	&13B	&13C	&13D	&13E	&13F

320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335
&140	&141	&142	&143	&144	&145	&146	&147	&148	&149	&14A	&14B	&14C	&14D	&14E	&14F

continued...

**Table 3.2 (DS1-7 off, DS2-5 on, ESC t SOH)
IBM character set #2 - standard**

....continued

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
			♥	♦	♣	♠									
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
					§										
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F

32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F

48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
0	1	2	3	4	5	6	7	8	9	:	:	<	=	>	?
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F

64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&40	&41	&42	&43	&44	&45	&46	&47	&48	&49	&4A	&4B	&4C	&4D	&4E	&4F

80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&50	&51	&52	&53	&54	&55	&56	&57	&58	&59	&5A	&5B	&5C	&5D	&5E	&5F

96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&60	&61	&62	&63	&64	&65	&66	&67	&68	&69	&6A	&6B	&6C	&6D	&6E	&6F

....continued

Table 3.2 continued....

Table 3.2 continued

112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
p	q	r	s	t	u	v	w	x	y	z	{		}	~	
&70	&71	&72	&73	&74	&75	&76	&77	&78	&79	&7A	&7B	&7C	&7D	&7E	&7F

128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
Ç	ü	ë	â	ä	å	ã	ç	ê	ë	è	í	î	ï	Ä	Å
&80	&81	&82	&83	&84	&85	&86	&87	&88	&89	&8A	&8B	&8C	&8D	&8E	&8F

144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
É	æ	Æ	ô	ö	õ	û	ü	ý	ÿ	Ü	ƒ	£	¥	ℳ	ƒ
&90	&91	&92	&93	&94	&95	&96	&97	&98	&99	&9A	&9B	&9C	&9D	&9E	&9F

160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF

176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
Š	Š	Š		†	‡	§	§	¶	¶	¶	¶	¶	¶	¶	¶
&B0	&B1	&B2	&B3	&B4	&B5	&B6	&B7	&B8	&B9	&BA	&BB	&BC	&BD	&BE	&BF

192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł	Ł
&C0	&C1	&C2	&C3	&C4	&C5	&C6	&C7	&C8	&C9	&CA	&CB	&CC	&CD	&CE	&CF

208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
ll	ll	ll	ll	ll	ll	ll	ll	ll	ll	ll	ll	ll	ll	ll	ll
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

....continued

Table 3.2 continued....

224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
α	β	Γ	π	Σ	σ	η	τ	Φ	Θ	Ω	δ	ω	ø	€	Π
&E0	&E1	&E2	&E3	&E4	&E5	&E6	&E7	&E8	&E9	&EA	&EB	&EC	&ED	&EE	&EF

240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
≡	±	≥	≤	∫	ℓ	÷	≈	°	•	-	√	n	²	■	
&F0	&F1	&F2	&F3	&F4	&F5	&F6	&F7	&F8	&F9	&FA	&FB	&FC	&FD	&FE	&FF

260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&G0	&G1	&G2	&G3	&G4	&G5	&G6	&G7	&G8	&G9	&GA	&GB	&GC	&GD	&GE	&GF

280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&H0	&H1	&H2	&H3	&H4	&H5	&H6	&H7	&H8	&H9	&HA	&HB	&HC	&HD	&HE	&HF

300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&I0	&I1	&I2	&I3	&I4	&I5	&I6	&I7	&I8	&I9	&IA	&IB	&IC	&ID	&IE	&IF

320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&J0	&J1	&J2	&J3	&J4	&J5	&J6	&J7	&J8	&J9	&JA	&JB	&JC	&JD	&JE	&JF

340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355
ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ	ℓ
&K0	&K1	&K2	&K3	&K4	&K5	&K6	&K7	&K8	&K9	&KA	&KB	&KC	&KD	&KE	&KF

continued....

Table 4.1 (DS1-7 on, DS2-5 on)
IBM character set #1 - LQ

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F

32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F

48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F

64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&40	&41	&42	&43	&44	&45	&46	&47	&48	&49	&4A	&4B	&4C	&4D	&4E	&4F

80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&50	&51	&52	&53	&54	&55	&56	&57	&58	&59	&5A	&5B	&5C	&5D	&5E	&5F

96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&60	&61	&62	&63	&64	&65	&66	&67	&68	&69	&6A	&6B	&6C	&6D	&6E	&6F

Table 4.1 continued....

Table 4.1 (D21-7 on D25-5 on)
IBM character set #1 - 1-Q

112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
p	q	r	s	t	u	v	w	x	y	z	{	!	}	~	
&70	&71	&72	&73	&74	&75	&76	&77	&78	&79	&7A	&7B	&7C	&7D	&7E	&7F

128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
&80	&81	&82	&83	&84	&85	&86	&87	&88	&89	&8A	&8B	&8C	&8D	&8E	&8F

144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
&90	&91	&92	&93	&94	&95	&96	&97	&98	&99	&9A	&9B	&9C	&9D	&9E	&9F

160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
á	í	ó	ú	ñ	Ñ	ä	ö	¿	¬	¬	½	¼	;	«	»
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF

176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
≡	≡	≡													
&B0	&B1	&B2	&B3	&B4	&B5	&B6	&B7	&B8	&B9	&BA	&BB	&BC	&BD	&BE	&BF

192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞
&C0	&C1	&C2	&C3	&C4	&C5	&C6	&C7	&C8	&C9	&CA	&CB	&CC	&CD	&CE	&CF

208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞	⌞
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

....continued

Table 4.1 continued....

224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
α	β	Γ	π	Σ	σ	μ	τ	Φ	θ	Ω	δ	∞	ø	€	∩
&E0	&E1	&E2	&E3	&E4	&E5	&E6	&E7	&E8	&E9	&EA	&EB	&EC	&ED	&EE	&EF

240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
≡	±	≥	≤	∫	∫	÷	≈	°	•	-	√	∞	²	■	
&F0	&F1	&F2	&F3	&F4	&F5	&F6	&F7	&F8	&F9	&FA	&FB	&FC	&FD	&FE	&FF

**Table 4.2 (DS1-7 on, DS2-5 on, ESC t STX)
IBM character set #2 - LQ**

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
			♥	♦	♣	♠									
&00	&01	&02	&03	&04	&05	&06	&07	&08	&09	&0A	&0B	&0C	&0D	&0E	&0F

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
					§										
&10	&11	&12	&13	&14	&15	&16	&17	&18	&19	&1A	&1B	&1C	&1D	&1E	&1F

32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
&20	&21	&22	&23	&24	&25	&26	&27	&28	&29	&2A	&2B	&2C	&2D	&2E	&2F

48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
&30	&31	&32	&33	&34	&35	&36	&37	&38	&39	&3A	&3B	&3C	&3D	&3E	&3F

64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
&40	&41	&42	&43	&44	&45	&46	&47	&48	&49	&4A	&4B	&4C	&4D	&4E	&4F

80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
&50	&51	&52	&53	&54	&55	&56	&57	&58	&59	&5A	&5B	&5C	&5D	&5E	&5F

96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
&60	&61	&62	&63	&64	&65	&66	&67	&68	&69	&6A	&6B	&6C	&6D	&6E	&6F

Table 4.2 continued....

112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
p	q	r	s	t	u	v	w	x	y	z	{	!	}	~	
&70	&71	&72	&73	&74	&75	&76	&77	&78	&79	&7A	&7B	&7C	&7D	&7E	&7F

128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
Ç	ü	é	â	ä	à	å	ç	ê	ë	è	ï	î	ì	Å	Ä
&80	&81	&82	&83	&84	&85	&86	&87	&88	&89	&8A	&8B	&8C	&8D	&8E	&8F

144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
É	æ	Æ	ô	ö	ò	û	ù	ÿ	Ö	Ü	¢	£	¥	℞	f
&90	&91	&92	&93	&94	&95	&96	&97	&98	&99	&9A	&9B	&9C	&9D	&9E	&9F

160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
á	í	ó	ú	ñ	Ñ	ä	ö	¿	¬	¬	¼	½	¾	«	»
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF

176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
≡	≡	≡													
&B0	&B1	&B2	&B3	&B4	&B5	&B6	&B7	&B8	&B9	&BA	&BB	&BC	&BD	&BE	&BF

192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
ℓ	⊥	⊥	⊥	—	+	⊥	⊥	⊥	⊥	⊥	⊥	⊥	=	⊥	⊥
&C0	&C1	&C2	&C3	&C4	&C5	&C6	&C7	&C8	&C9	&CA	&CB	&CC	&CD	&CE	&CF

208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥	⊥
&D0	&D1	&D2	&D3	&D4	&D5	&D6	&D7	&D8	&D9	&DA	&DB	&DC	&DD	&DE	&DF

....continued

Table 4.2 continued....

224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
α	β	Γ	π	Σ	σ	μ	τ	Φ	θ	Ω	δ	∞	ϕ	ϵ	$\cap$
&E0	&E1	&E2	&E3	&E4	&E5	&E6	&E7	&E8	&E9	&EA	&EB	&EC	&ED	&EE	&EF

240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255
$\equiv$	$\pm$	$\geq$	$\leq$	$\int$	$\int$	$\div$	$\approx$	$^{\circ}$	$\cdot$	$-$	$\sqrt{}$	$^{\circ}$	2	$^{\circ}$	$^{\circ}$
&F0	&F1	&F2	&F3	&F4	&F5	&F6	&F7	&F8	&F9	&FA	&FB	&FC	&FD	&FE	&FF

256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271
$\frac{1}{2}$	$\frac{1}{4}$	$\frac{3}{4}$	$\frac{1}{8}$	$\frac{3}{8}$	$\frac{5}{8}$	$\frac{7}{8}$	$\frac{1}{16}$	$\frac{3}{16}$	$\frac{5}{16}$	$\frac{7}{16}$	$\frac{9}{16}$	$\frac{11}{16}$	$\frac{13}{16}$	$\frac{15}{16}$	$\frac{1}{32}$
&G0	&G1	&G2	&G3	&G4	&G5	&G6	&G7	&G8	&G9	&GA	&GB	&GC	&GD	&GE	

000	001	002	003	004	005	006	007	008	009	010	011	012	013	014	015
0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
&A0	&A1	&A2	&A3	&A4	&A5	&A6	&A7	&A8	&A9	&AA	&AB	&AC	&AD	&AE	&AF

288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303
$\frac{1}{128}$	$\frac{2}{128}$	$\frac{3}{128}$	$\frac{4}{128}$	$\frac{5}{128}$	$\frac{6}{128}$	$\frac{7}{128}$	$\frac{8}{128}$	$\frac{9}{128}$	$\frac{10}{128}$	$\frac{11}{128}$	$\frac{12}{128}$	$\frac{13}{128}$	$\frac{14}{128}$	$\frac{15}{128}$	$\frac{16}{128}$
&I0	&I1	&I2	&I3	&I4	&I5	&I6	&I7	&I8	&I9	&IA	&IB	&IC	&ID	&IE	

304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319
$\frac{1}{256}$	$\frac{2}{256}$	$\frac{3}{256}$	$\frac{4}{256}$	$\frac{5}{256}$	$\frac{6}{256}$	$\frac{7}{256}$	$\frac{8}{256}$	$\frac{9}{256}$	$\frac{10}{256}$	$\frac{11}{256}$	$\frac{12}{256}$	$\frac{13}{256}$	$\frac{14}{256}$	$\frac{15}{256}$	$\frac{16}{256}$
&J0	&J1	&J2	&J3	&J4	&J5	&J6	&J7	&J8	&J9	&JA	&JB	&JC	&JD	&JE	

320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335
$\frac{1}{512}$	$\frac{2}{512}$	$\frac{3}{512}$	$\frac{4}{512}$	$\frac{5}{512}$	$\frac{6}{512}$	$\frac{7}{512}$	$\frac{8}{512}$	$\frac{9}{512}$	$\frac{10}{512}$	$\frac{11}{512}$	$\frac{12}{512}$	$\frac{13}{512}$	$\frac{14}{512}$	$\frac{15}{512}$	$\frac{16}{512}$
&K0	&K1	&K2	&K3	&K4	&K5	&K6	&K7	&K8	&K9	&KA	&KB	&KC	&KD	&KE	

NOTE: The printing of international characters using the character codes shown in chapter 2 (either by DIP switch DS1-1, DS1-2, DS1-3 selection, or by use of the ESC R (n) control code) is NOT possible while IBM character set #1 or #2 is in use. If

NOTE: The printing of international characters using the character codes shown in chapter 2 (either by DIP switch DS1-1, DS1-2, DS1-3 selection, or by use of the ESC R «n» control code) is NOT possible while IBM character set #1 or #2 is in use. If, therefore, you wish to print international characters, ensure that you are not in IBM mode.

Appendix

Index

A

Absolute positioning	48, 49
Alarm bleeper	15, 33, 65, 82, 83
Alignment of characters	62, 66
AMSTRAD computers	1, 13, 14
ASCII	18, 31, 34, 75

B

Backspace	48
BASIC	19, 23, 28
BBC Microcomputer	1, 14
Bell	65
Bit image graphics	57, 60, 61, 62
Beeper	15, 33, 65, 82, 83
Bold printing	40, 70
Breakdowns	83
Buffer	28, 29, 47, 66

C

Carriage return	42, 47, 82
Centred text	53
Centronics interface	13, 79, 80, 81
Changing typeface	31, 68
Character alignment	62, 66
Character set	29, 68, 69, 82
Character tables	89, 91, 93, 95, 97, 99
Commodore computer	1, 14
Compatibility	1
Condensed typeface	35, 37, 70
Connecting to a home computer	14
Connecting to a PC	13
Connecting to mains supply	9
Control codes	33, 36, 47, 66
Control layout	18
Control P	27
CP/M files	28

D

Deleting characters	66
Denmark	32, 69
DIP switches	30, 32, 68, 82
Disk directory	27
DOS files	25
DOS Plus	25, 28
Double density graphics	61
Double speed double density graphics	61
Double strike printing	39, 70
Double width printing	42, 70
Download characters	71, 72, 73
Dump (hexadecimal)	74

E

Echoing screen output to printer	27
Eighth bit setting	40, 64
Elite typeface	35, 36
Epson character set	29, 64, 67, 82, 87, 89, 92
Escape code	34
ESC code	34

F

FF button	18, 19, 74
Filenames	25, 26
Flushing the buffer	28, 29
Foreign characters	31, 32, 68, 69
Form feed	19, 48
France	32, 69
Full justification	53

G

GEM files	28
Germany	32, 69
Graphics character set	62, 77, 94, 96, 98, 100
Graphics printing	57, 62, 73

H

Half speed printing	67
Hexadecimal dump	74
Horizontal tab	51

I

IBM character set	31, 62, 67, 69, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106
IBM PC	13, 31
Illegal combinations	45
Ink ribbon	9, 12
Inter character spacing	55
Interface	14, 80
Internal character set	68
International characters	31, 69
Italics printing	35, 40
Italy	32, 69

J

Japan	69
Justified text	53

L

Layout of controls	18
Left justify	53
Left margin	49
LF button	18, 19, 74
Line feed	18, 42, 47
Listing a program	24
Listing the disk directory	27
Loading paper	16
Locomotive BASIC 2	19, 24
LQ-proportional typeface	36
LQ-standard typeface	37, 38

M

Mains on/off switch	15
Mains plug	9
Maintenance	2
Mallard BASIC	19, 23
Manual paper feed knob	18
Margins	49
Microsoft BASIC	19
Mini typeface	36, 70
Moving the paper	18, 19
MS-DOS	25

N

Notation	24
NUL code	34

O

Off line	19
On line	19
On/off switch	15
One shot paper feed	55

P

Page length	50, 82
Paper feed knob	18
Paper feed rates	54
Paper guides	16
Paper (loading)	16
Paper out	15, 65, 83
Paper separator	20, 21
Paper thickness	17
Parallel interface	13, 14, 80
PC	13
PC-DOS	25
Perforation skip	50
Pica typeface	35
PL-1 printer lead	14

PL-2 printer lead	13, 14
Power lamp	15, 83
Preparation	9
Print buffer	28, 29, 47, 66
Printer cover	10, 11
Printer echo	27
Printer lead	13, 14
Printer socket	13, 79
Print formatting	53
Print head stabiliser	10, 11
Print mode	67
Proportional typeface	36

Q

Quadruple density graphics	61
----------------------------------	----

R

Relative positioning	49
Repeating print	63
Reset printer	35, 65
Reverse paper feed	19, 55
Ribbon	12, 13
Right justify	53
Right margin	49

S

Screen dump	27, 57
Self test printing	18
Serial Interface	14, 78, 82a, 82b, 82c
Servicing	2
Signal timing	82
Sinclair computer	1, 14
Single density graphics	60
Skip perforation	50, 82
Slashed zero	82
SOH code	34
Spain	32, 69
Specification	77, 78
Spacing	55

Standard typeface	35
Subscript printing	35, 36, 38, 44
Superscript printing	35, 39, 44
Sweden	32, 69
Switching on	15

T

Tab channels	52
Tabulation	51
Technical specification	77, 78
Thickness of paper	17
Timing	82
Tractor feed paper	20, 21, 22
Tractors	20
Triple density graphics	61
Typefaces	30, 33, 35, 36, 37

U

UK	31, 32, 69
Underlining	41, 70
Uni-directional printing	62, 66
Unpacking	9
USA	31, 32, 69
User defined characters	70

V

Variable paper feed	54, 55
Vertical tab	52

W

Wildcards	26, 28
-----------------	--------

Z

Zero slashing	30, 82
---------------------	--------

